




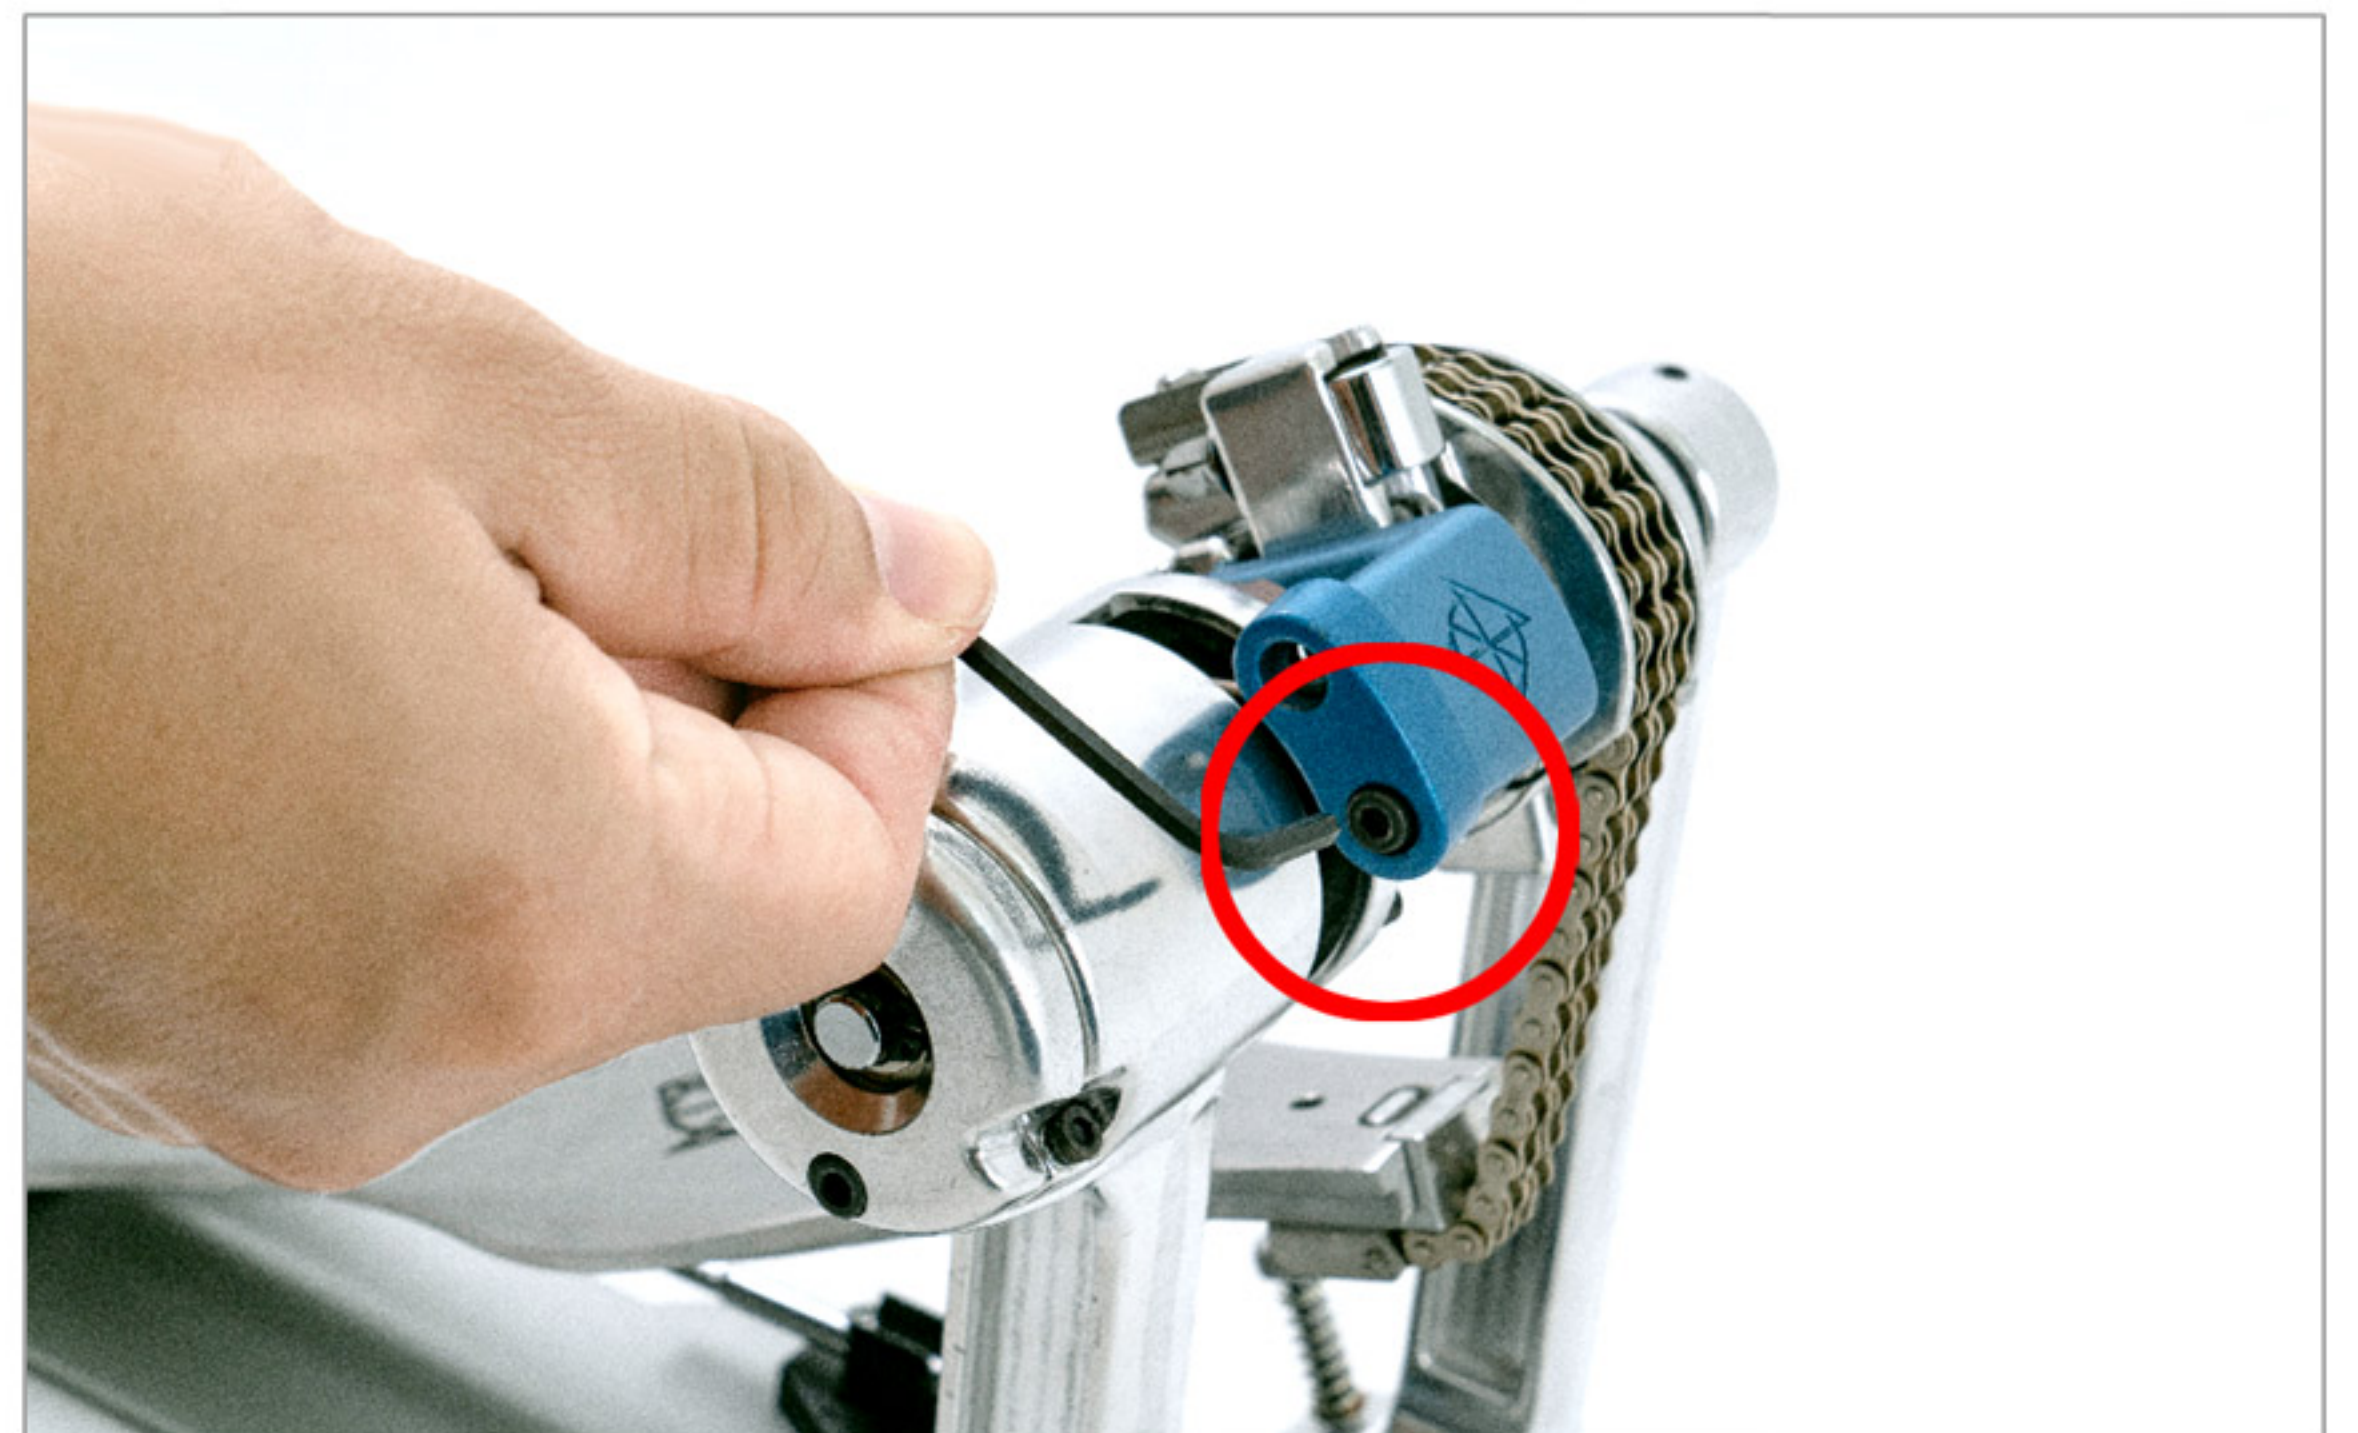
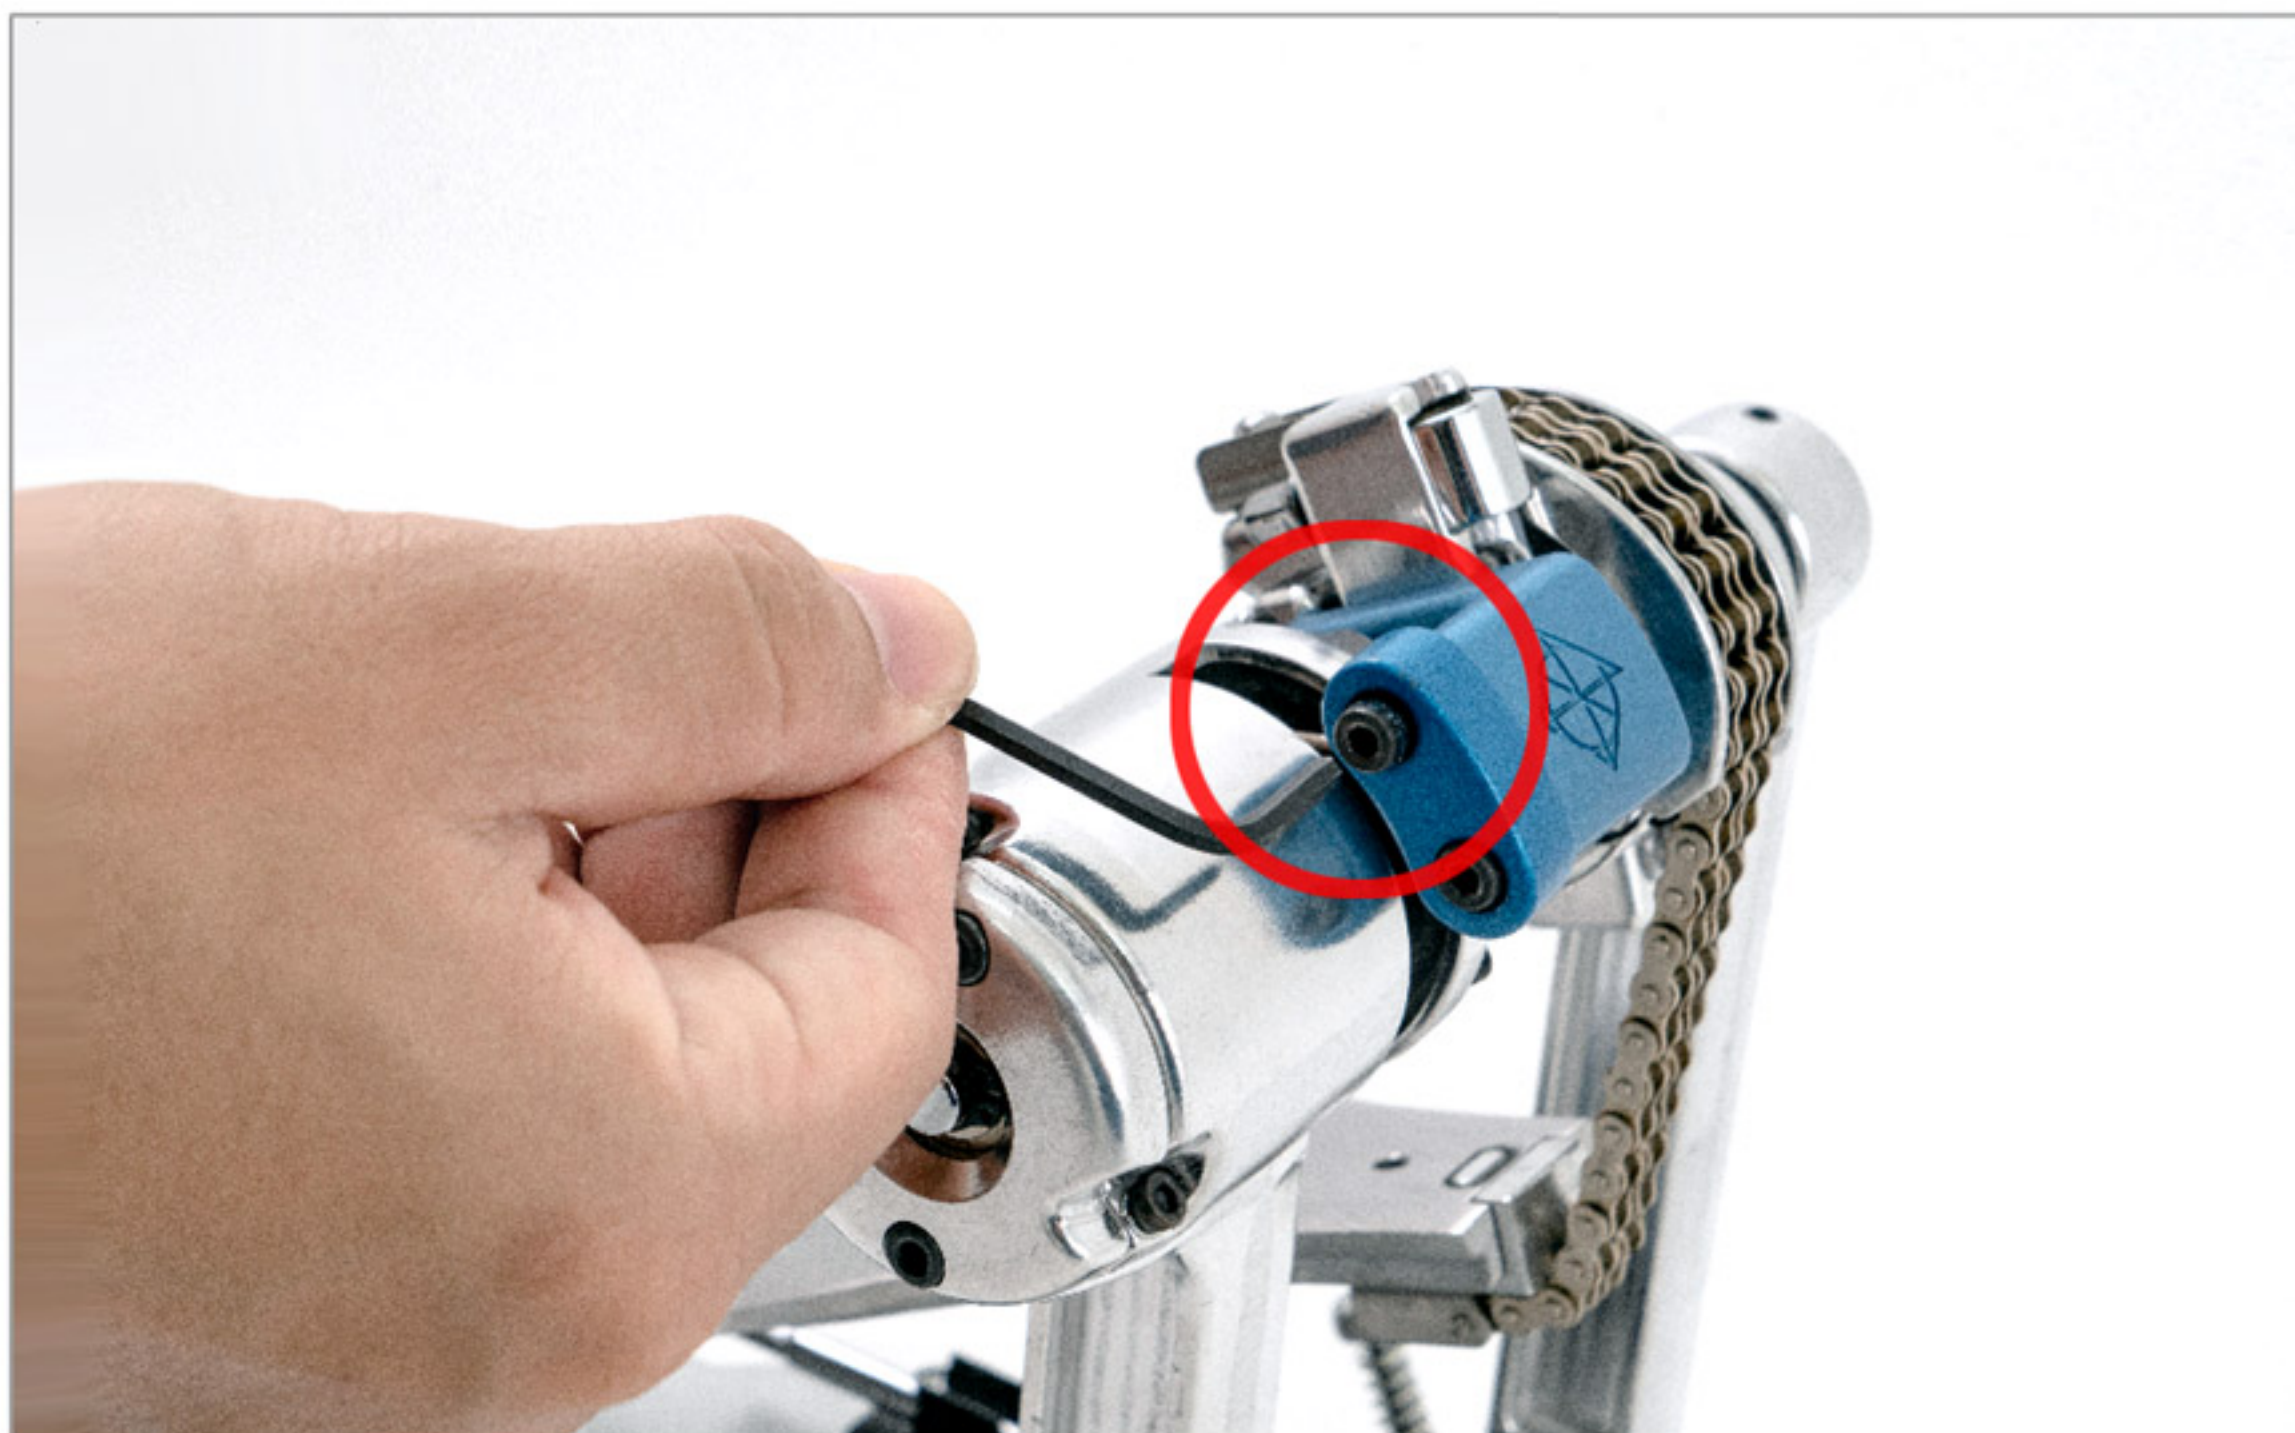
Parts List:



Part Name	Quantity
1. C-Clip Pliers	1
2. Long Nose Pliers	1
3. New Spring Set	1
4. 2.5mm Hex L Rod	1
5. 3mm Hex L Rod	1


Loosen The Spring Holder

Loosen the 2 screws on the blue spring holder to remove the cap with 3mm Hex L rod.





Remove The Spring Cover

Loosen the 2 screws on the side cover with 3mm Hex L rod.

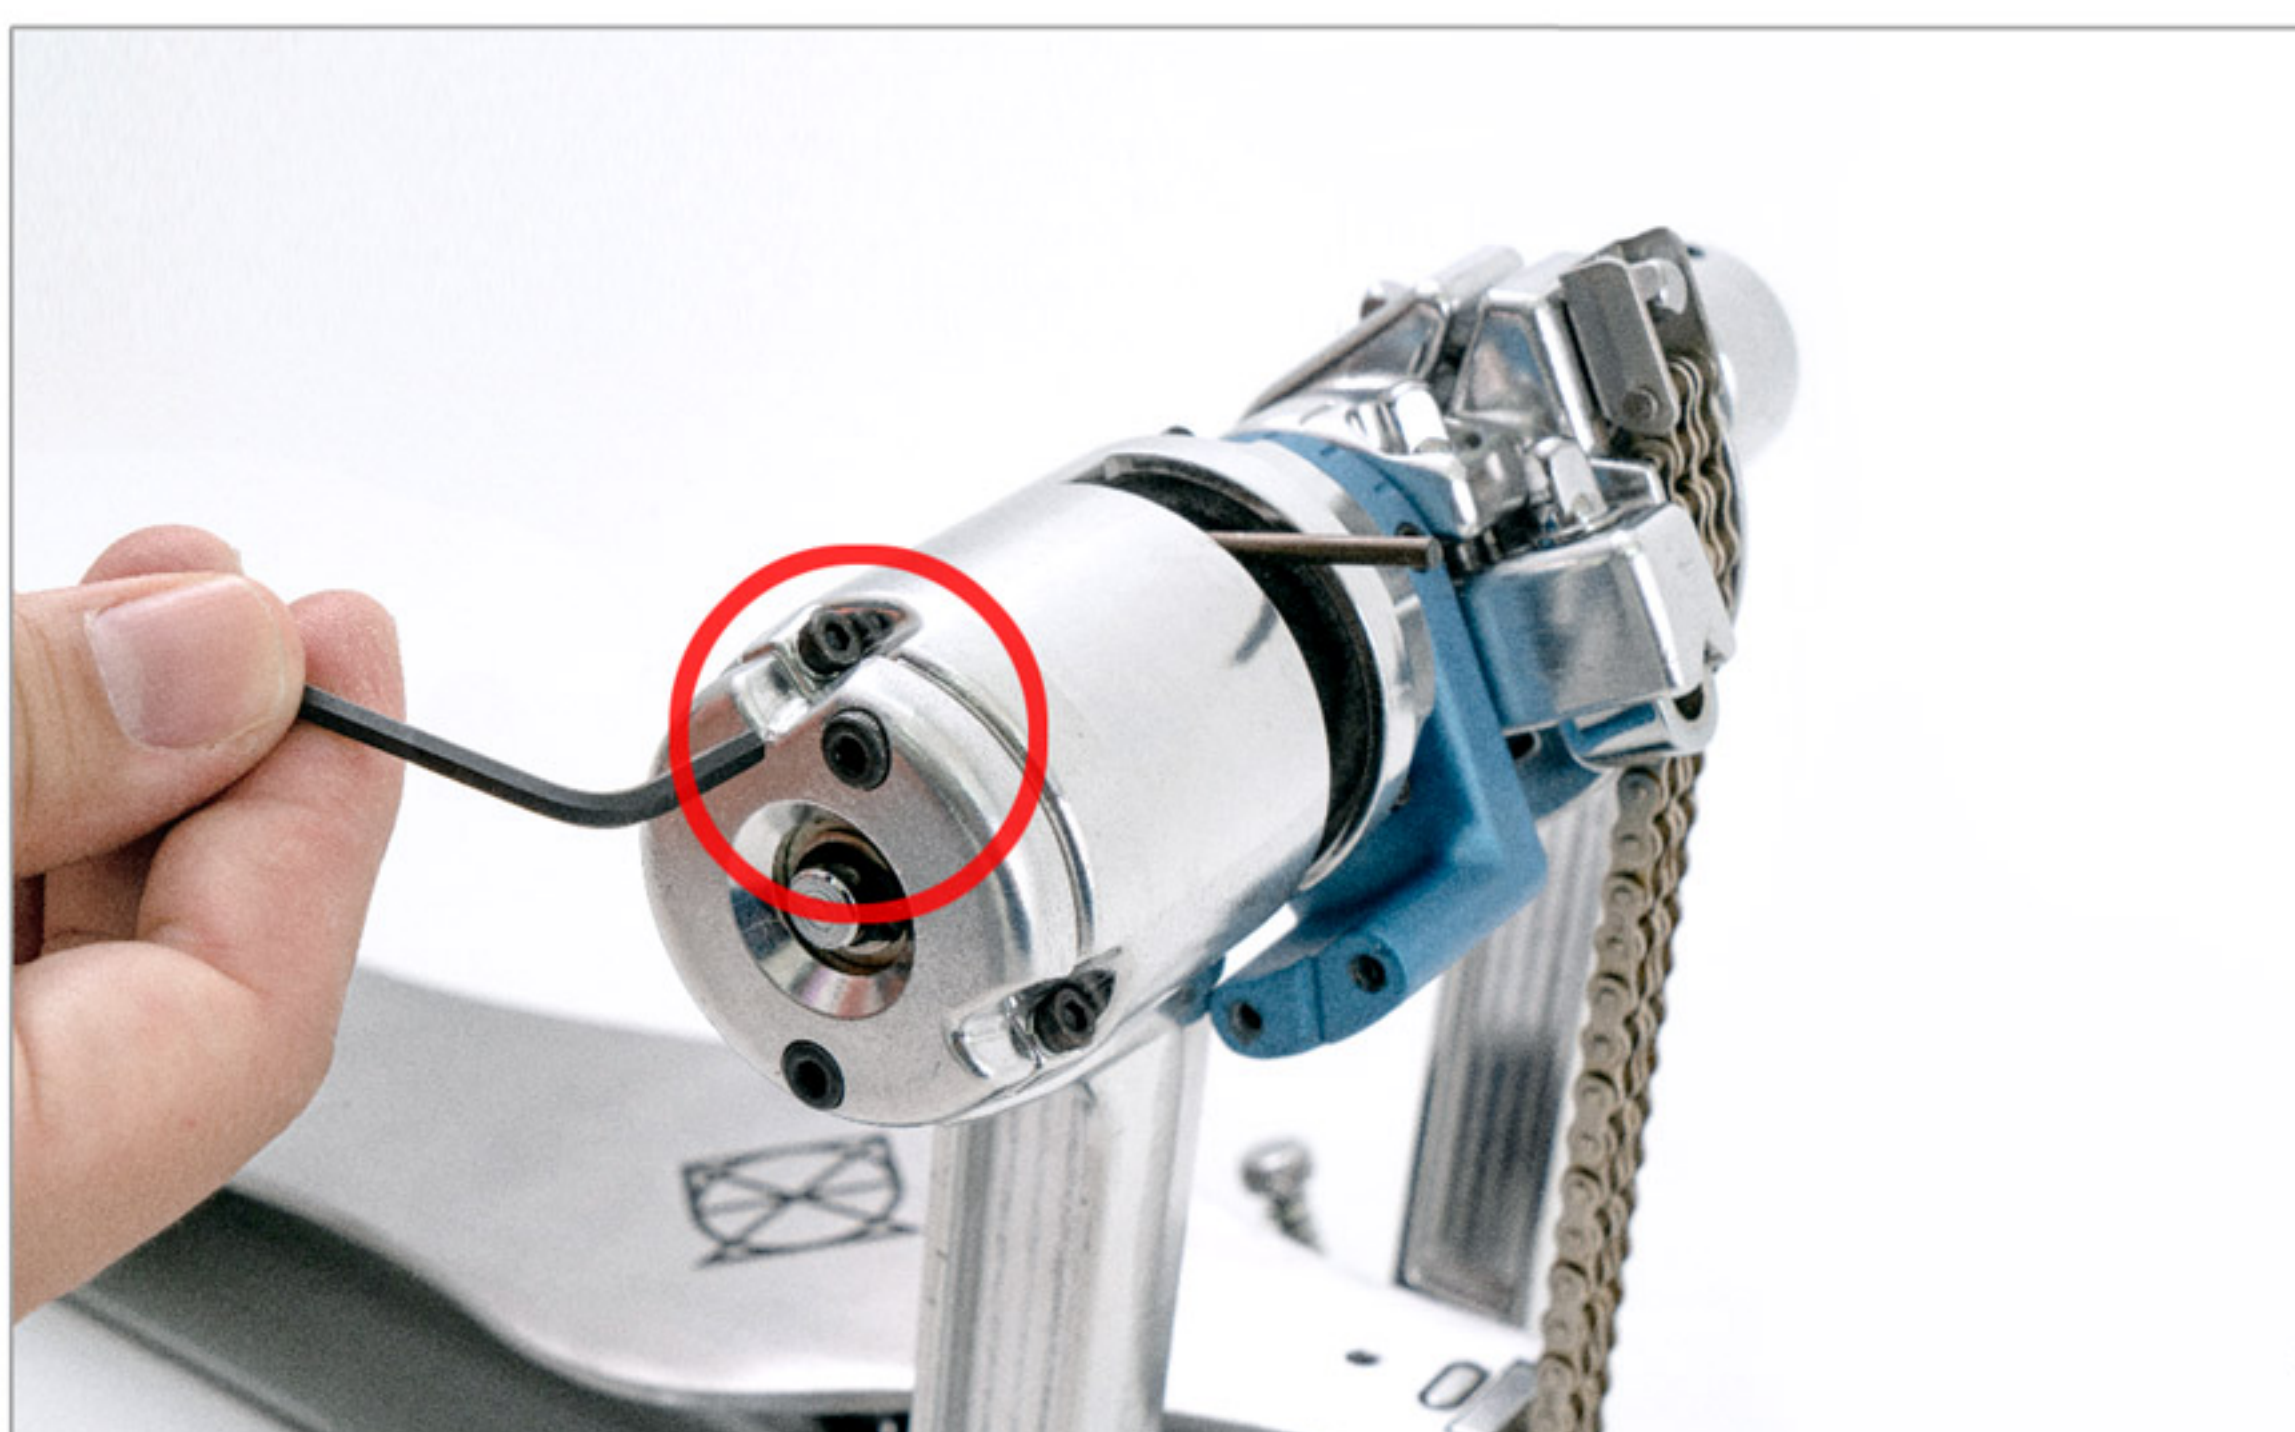




Loosen the 4 screws below in red to remove the top cover with 2.5mm Hex L rod.

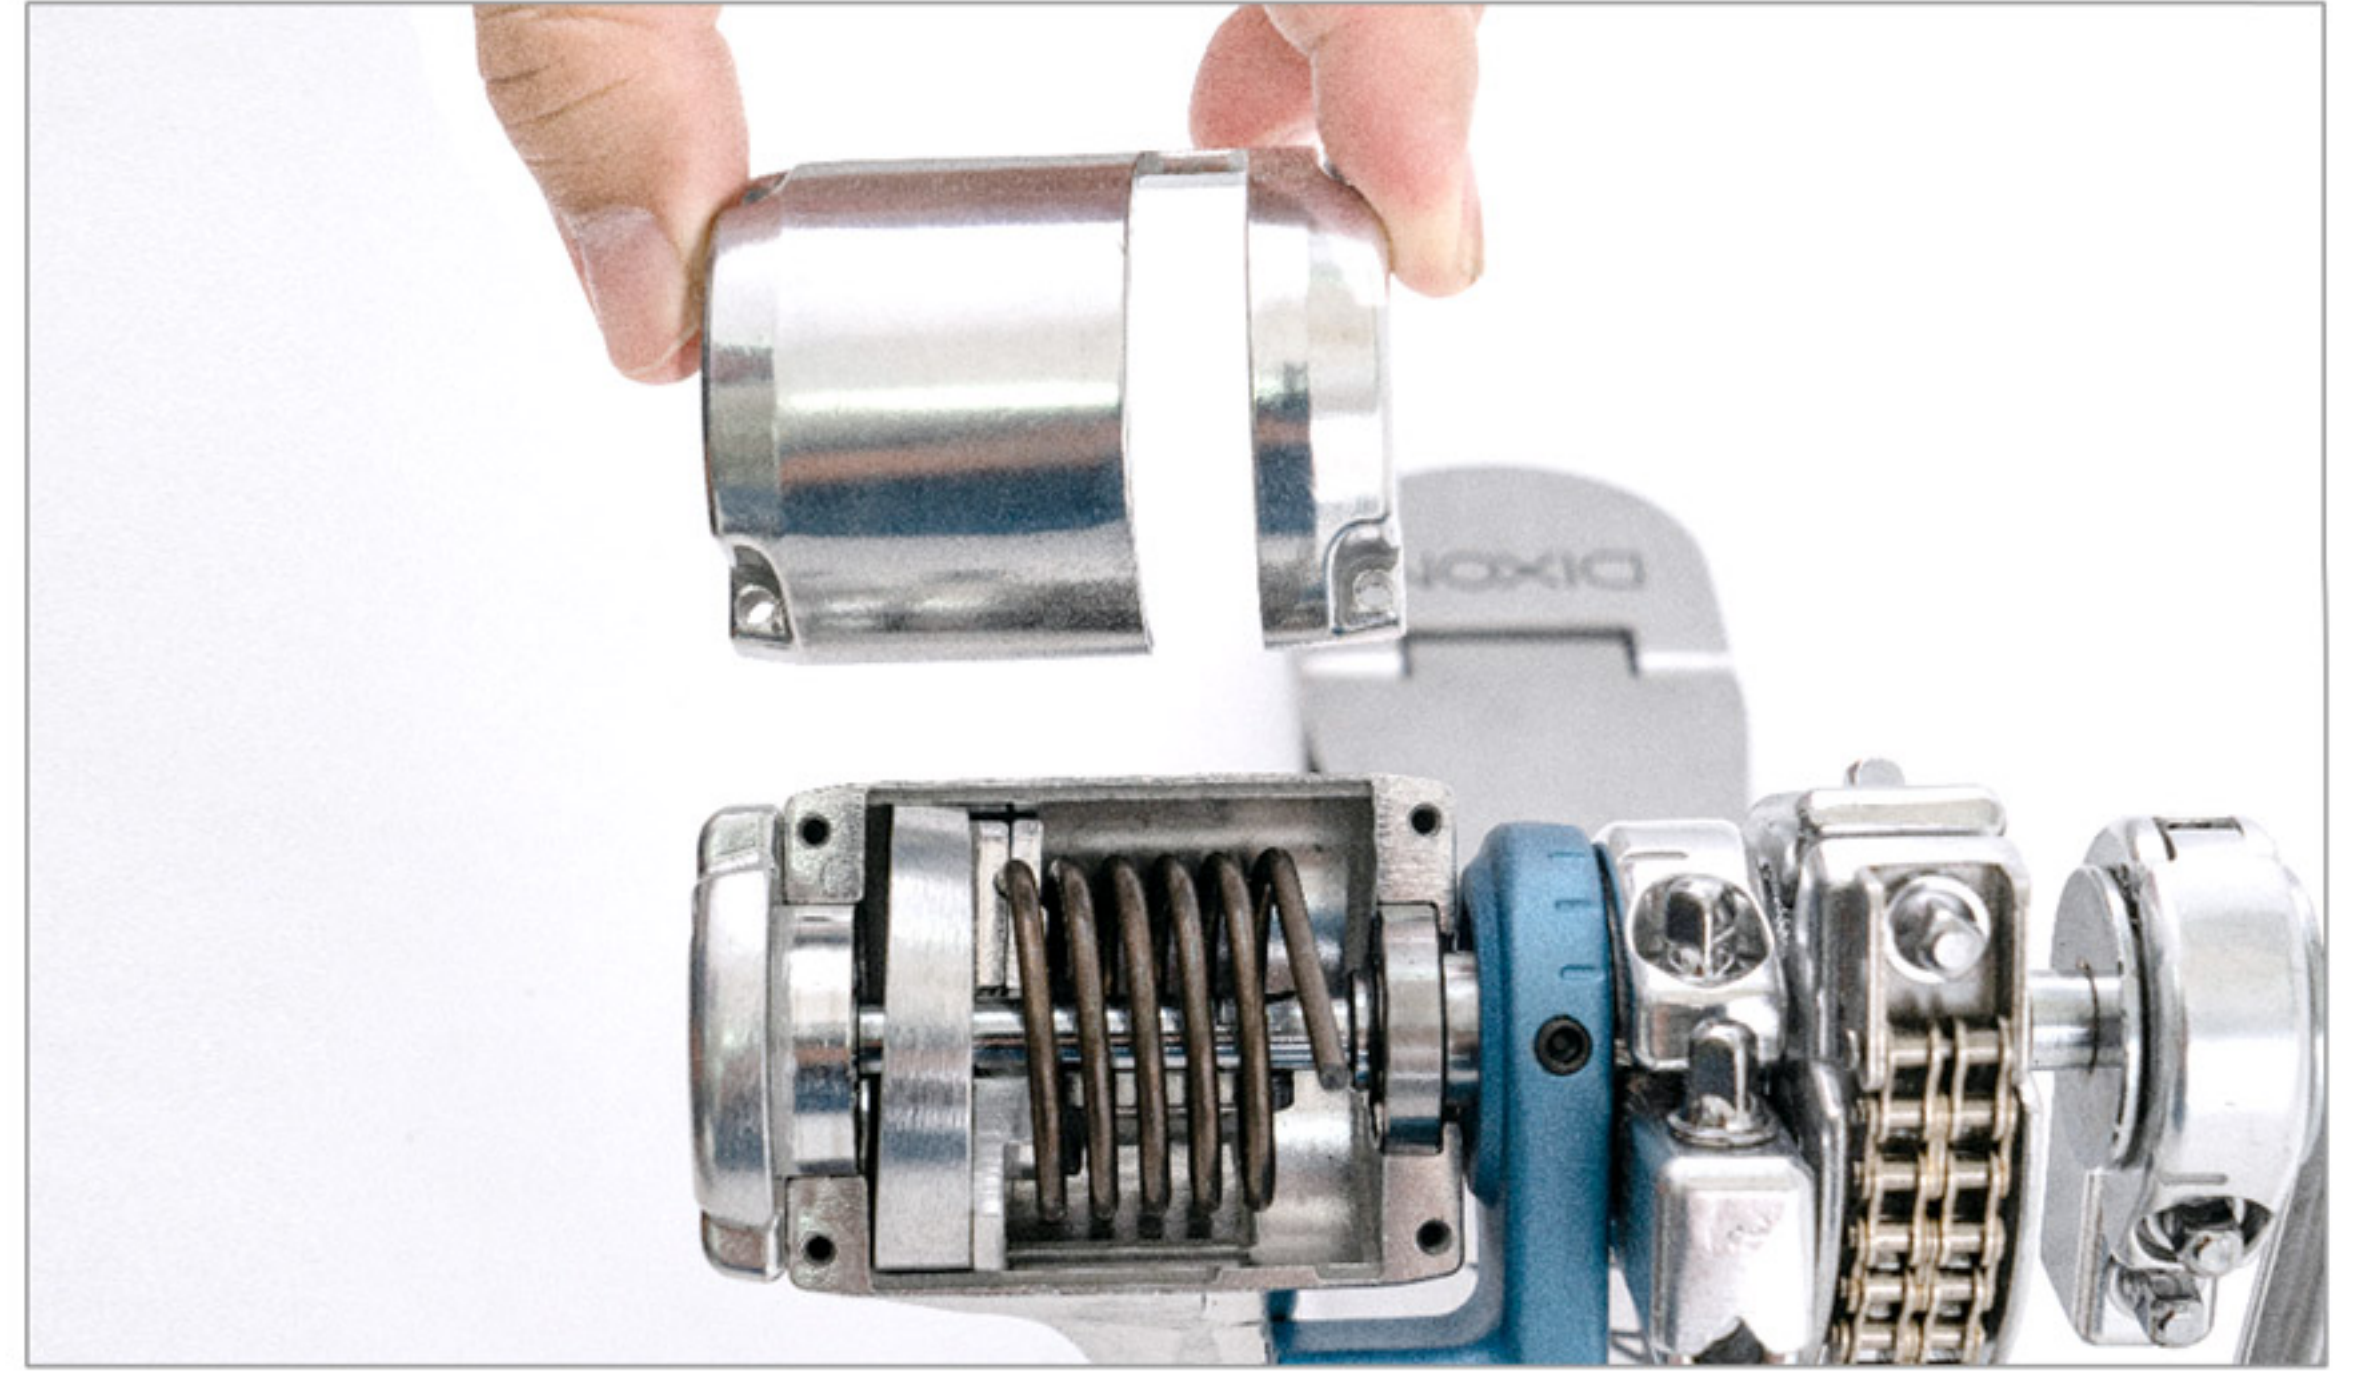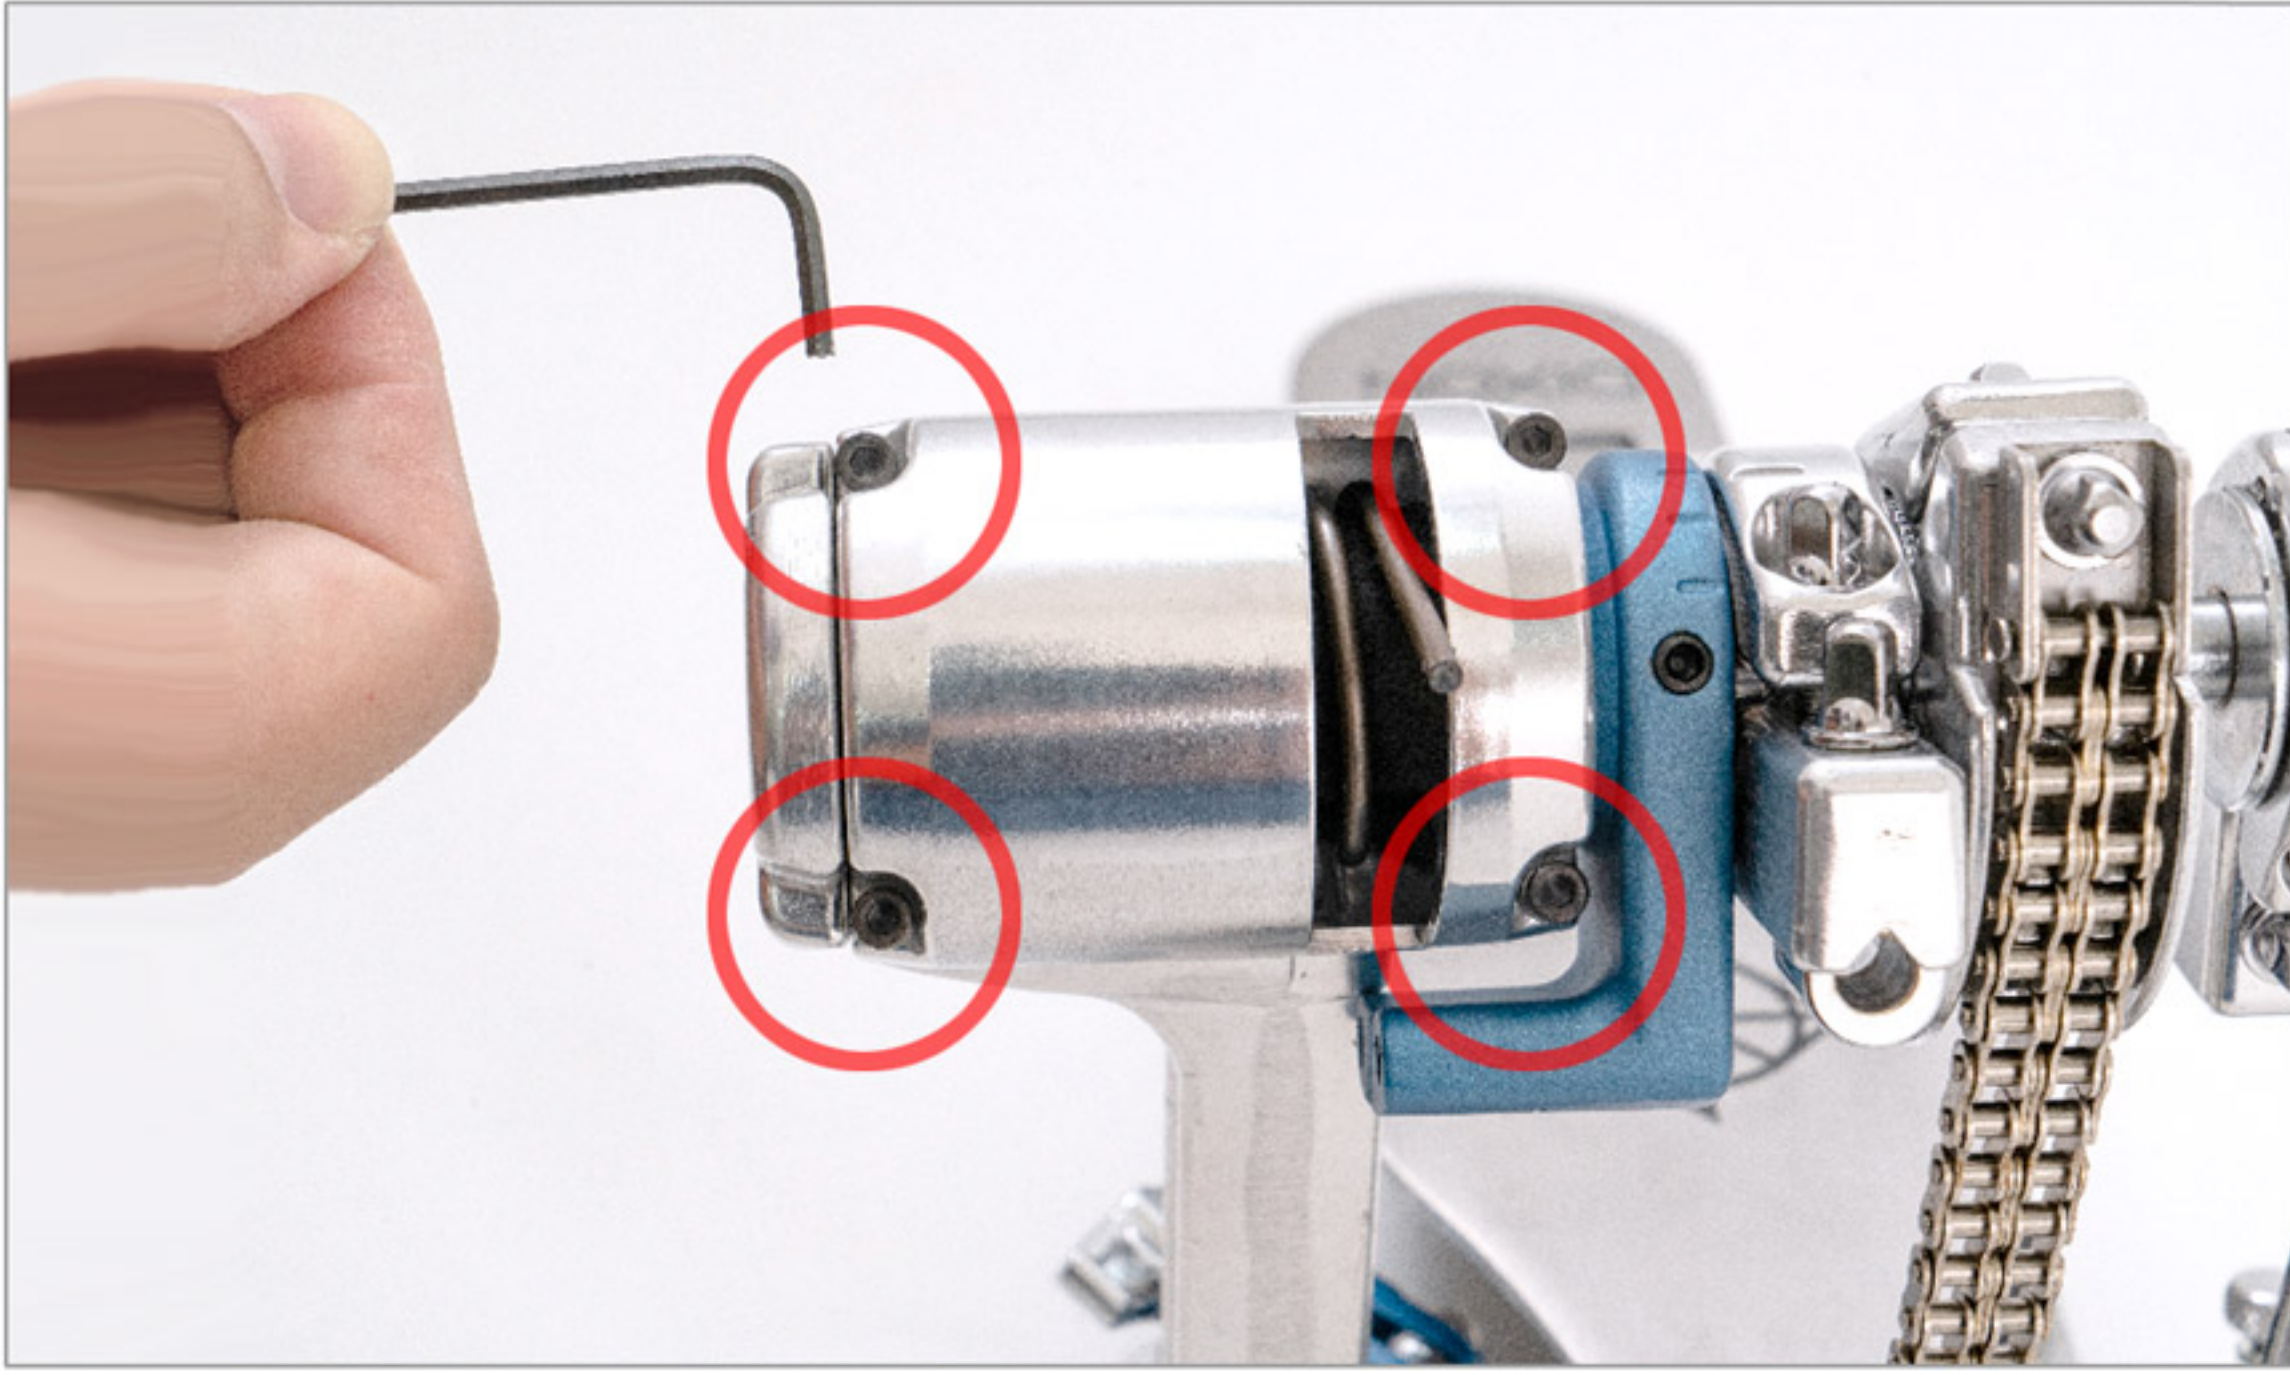

Remove The Spring Set

Loosen the screw on the central post with 2.5mm Hex L Rod.

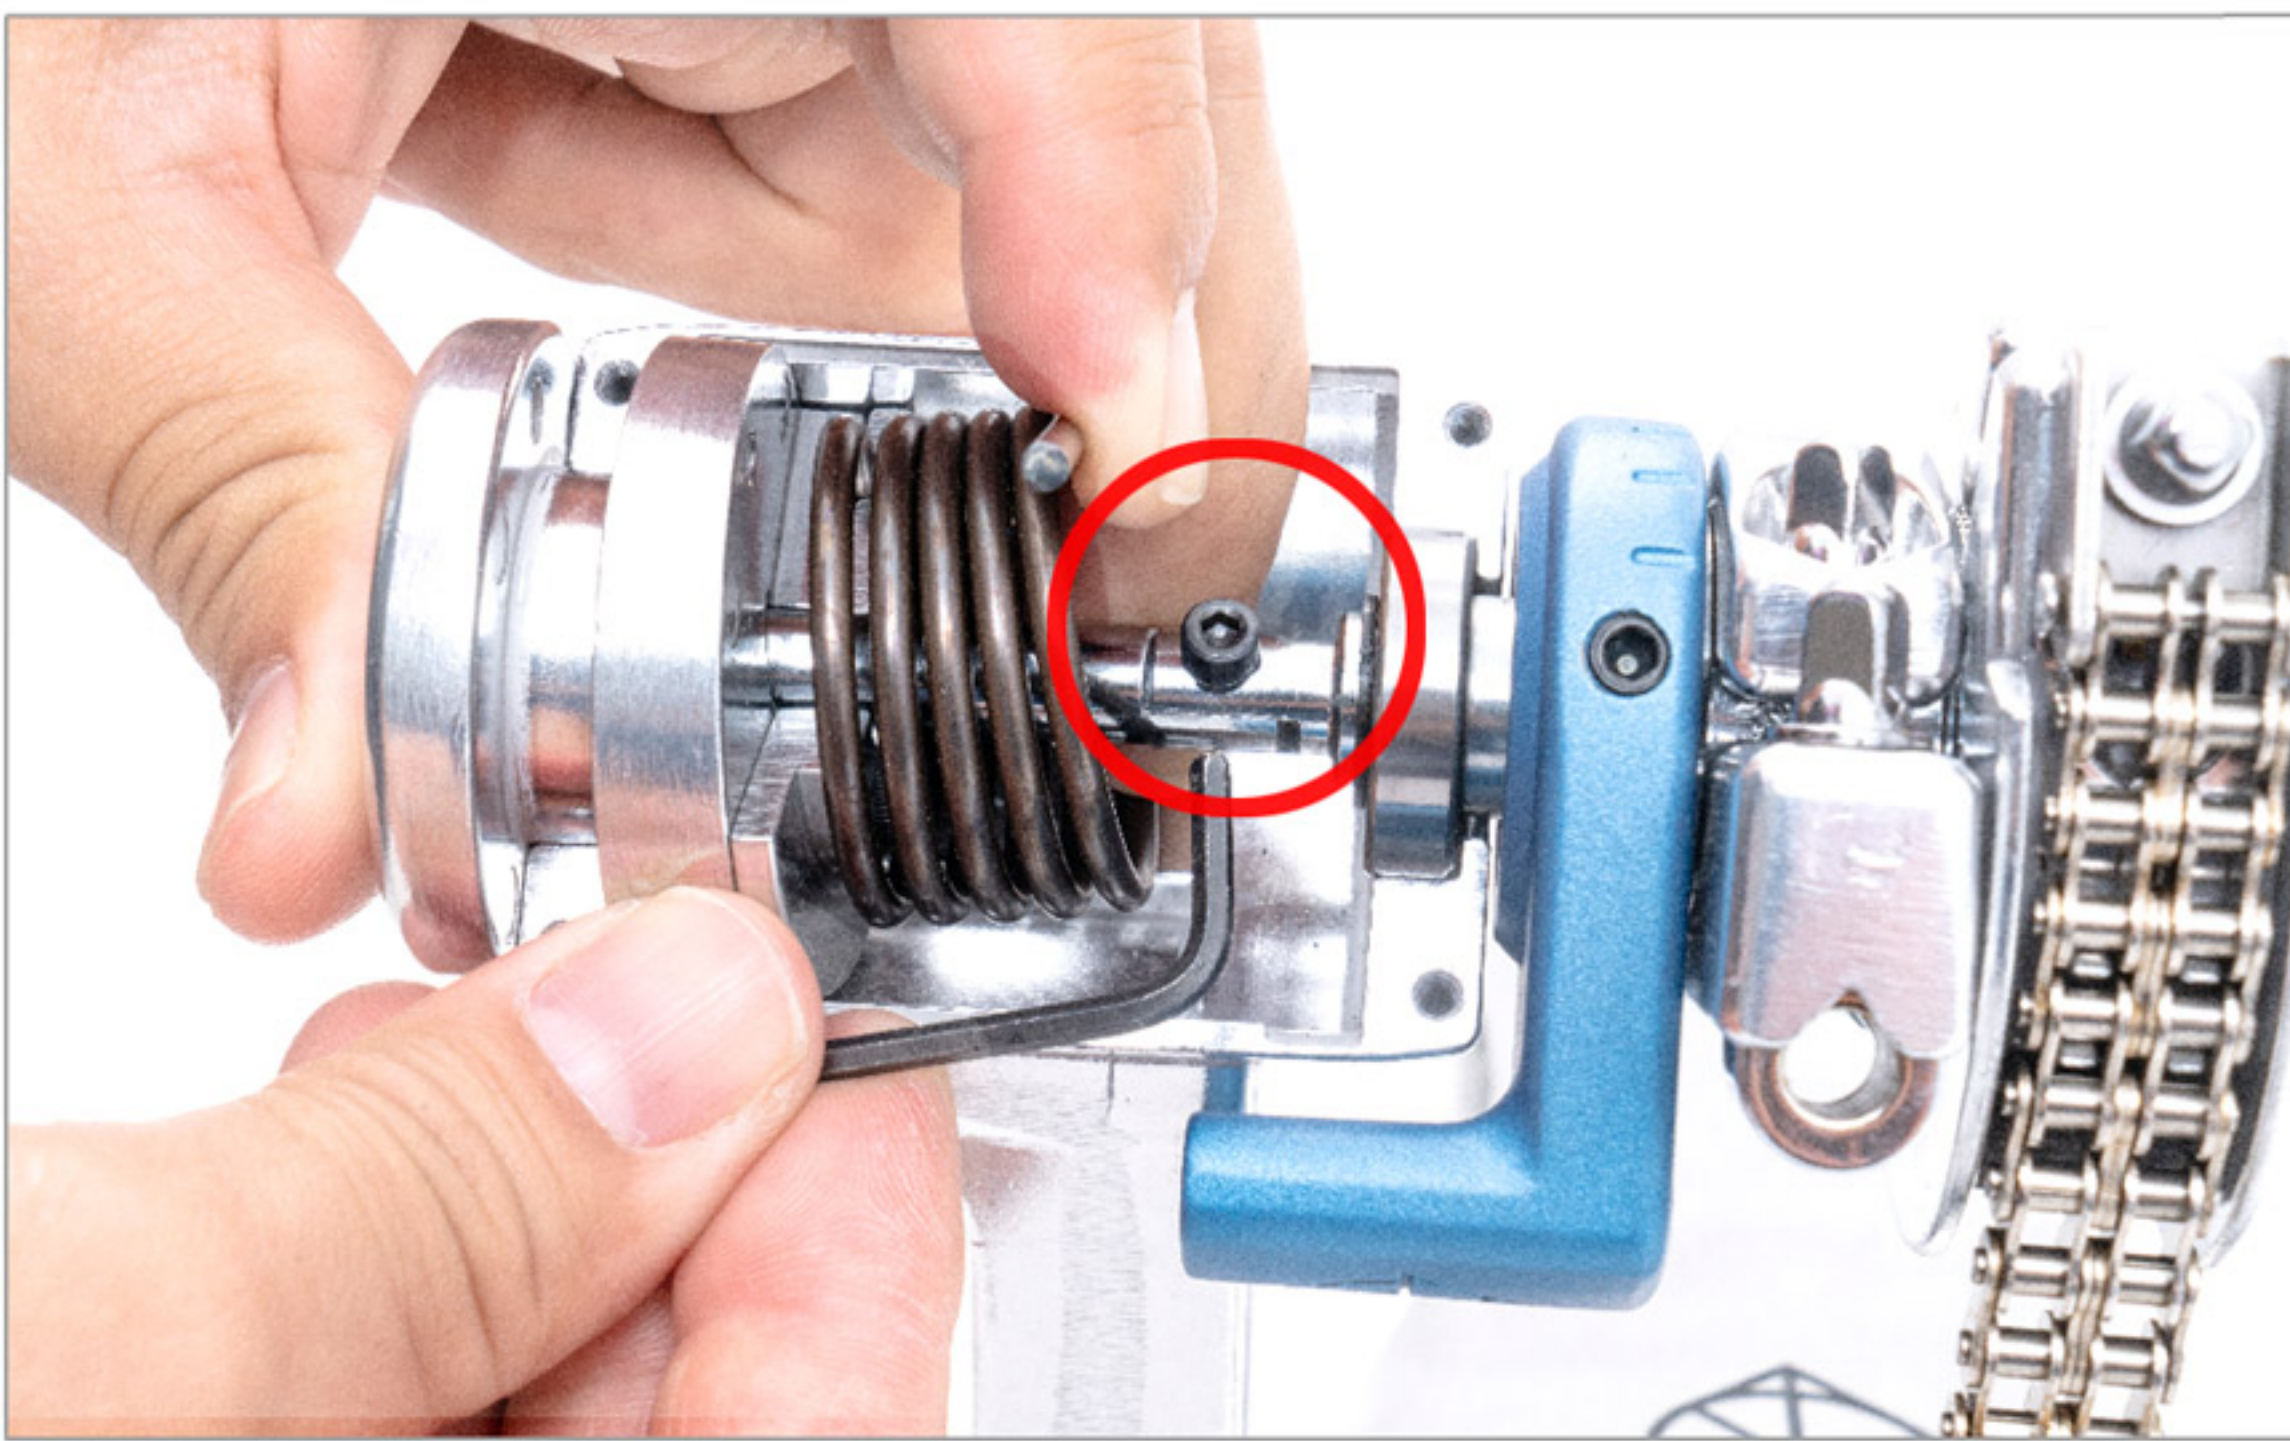


Remove the C-clip with pliers.






Pull out the side cover and connecting post to remove the spring set.


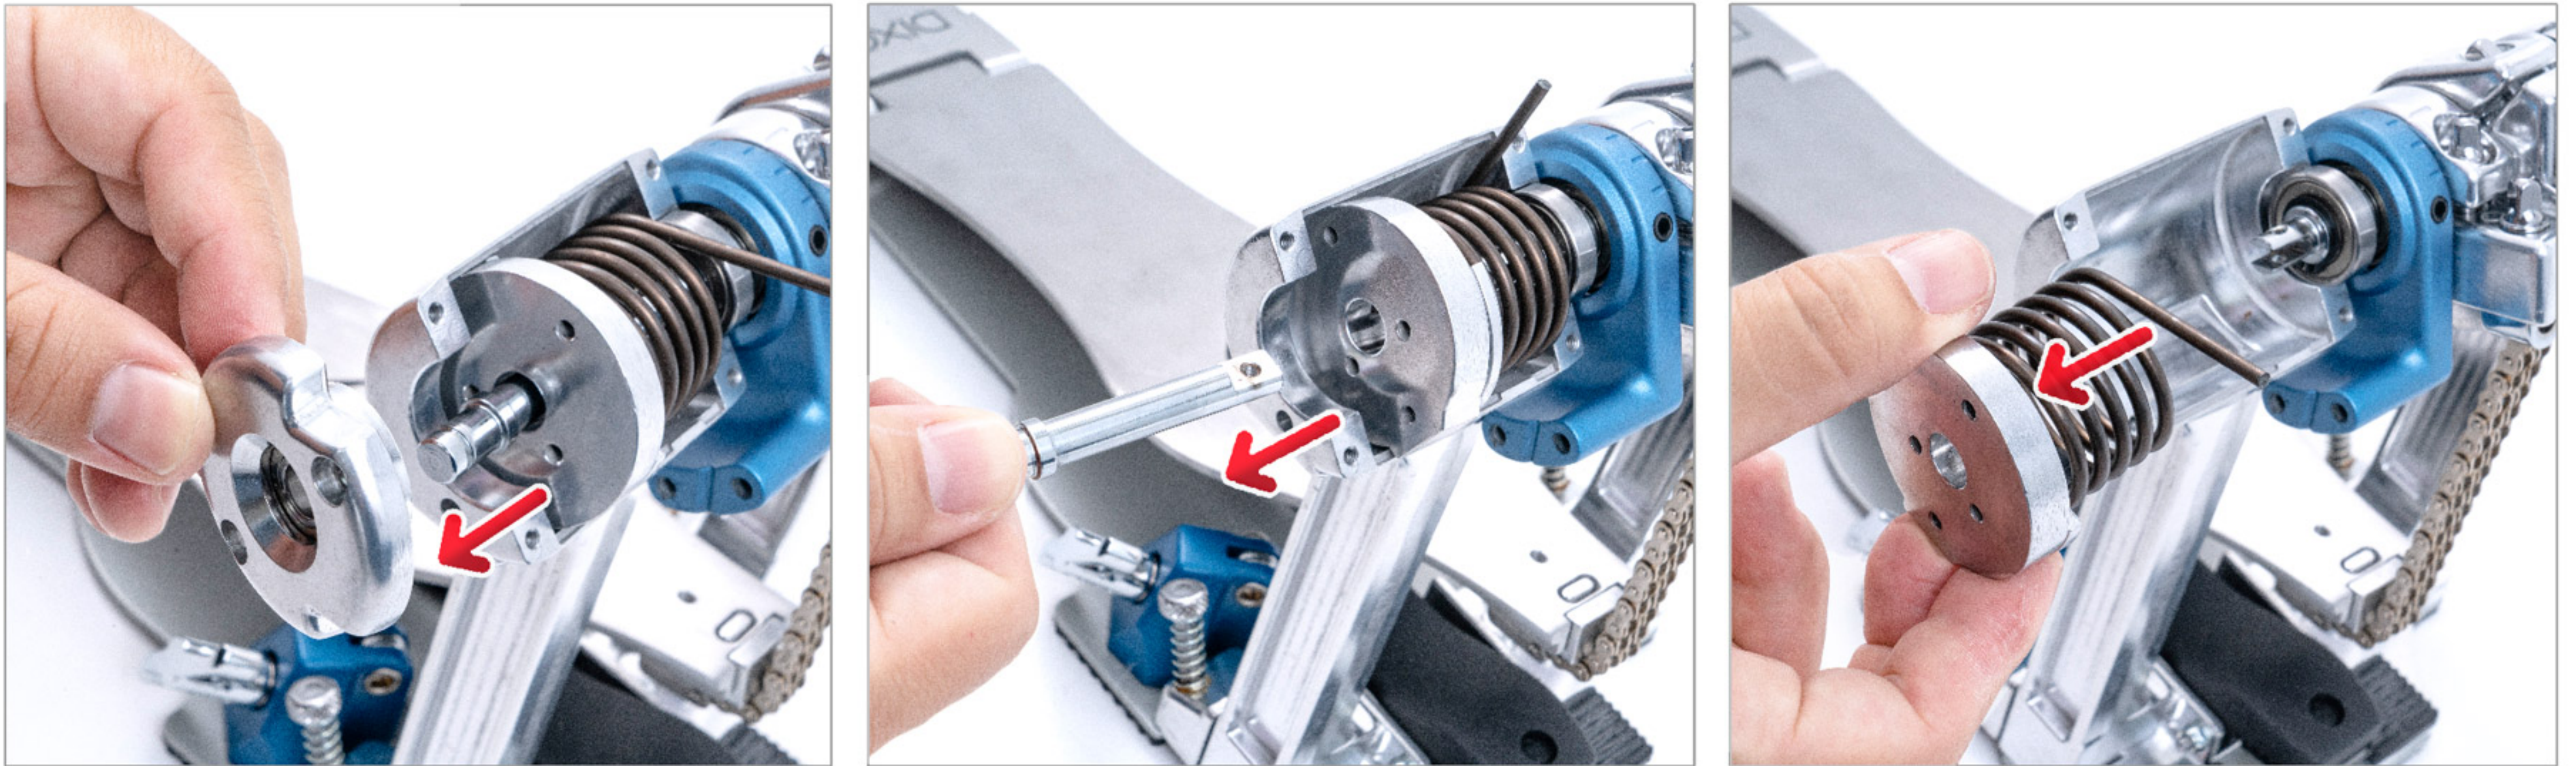


Install The New Spring Set

Place the new spring set into the spring chamber.

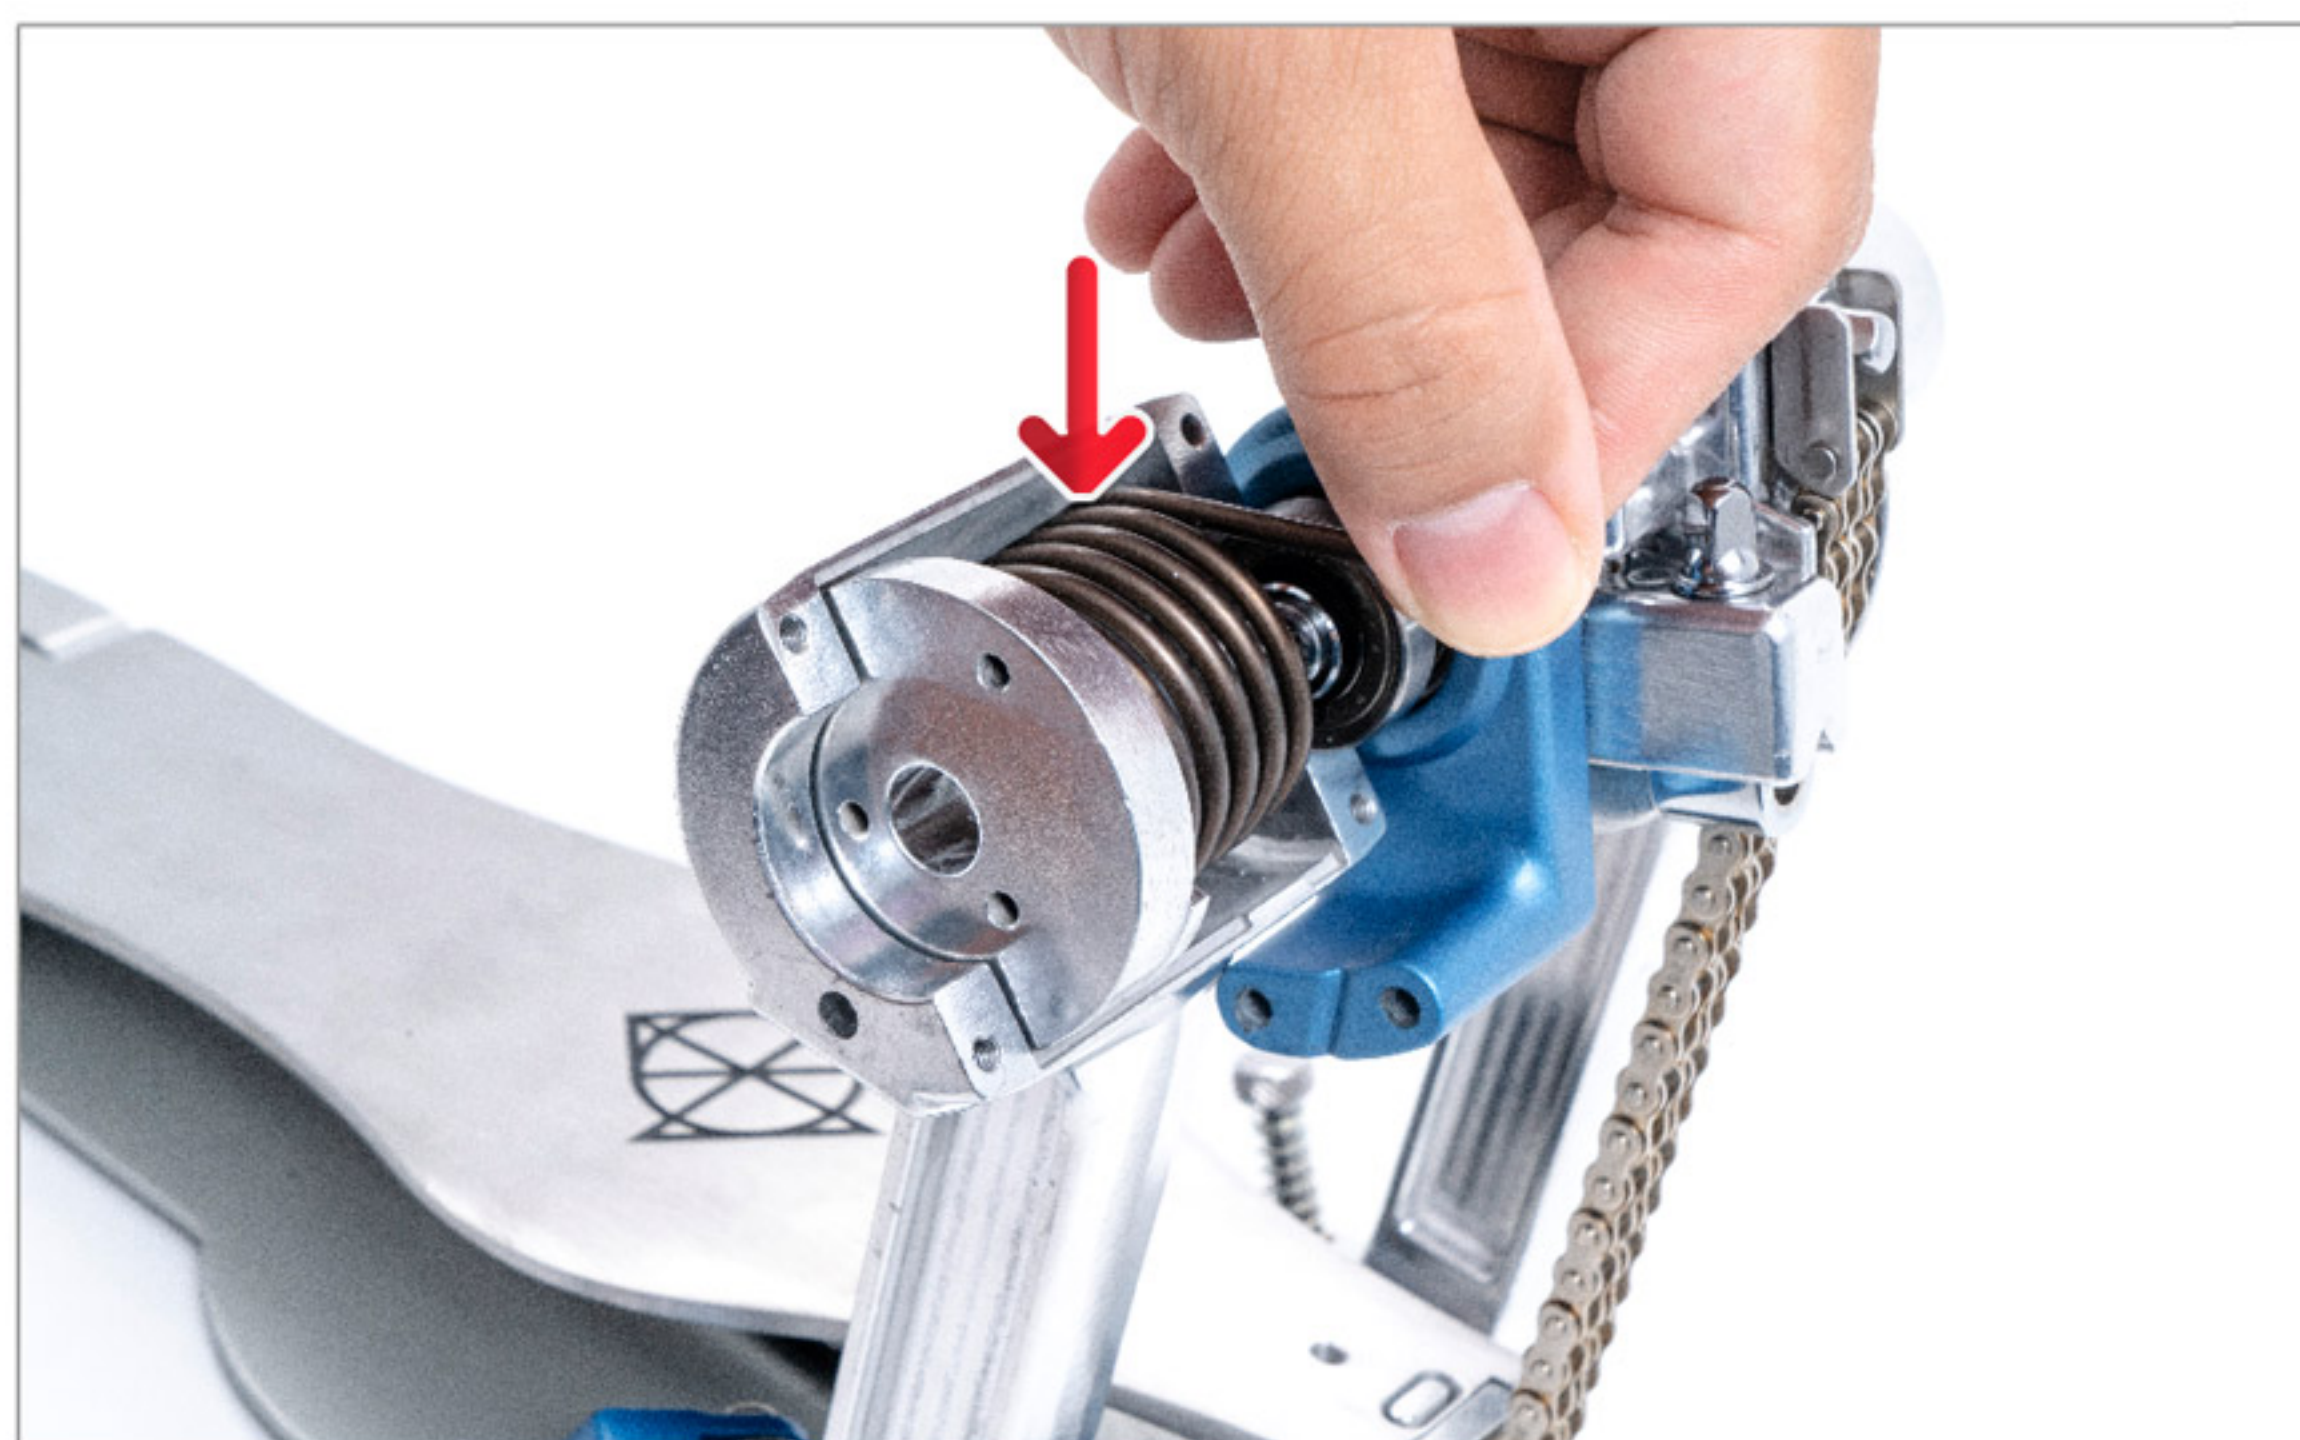



Insert the connecting post and tighten with 2.5mm Hex L rod.

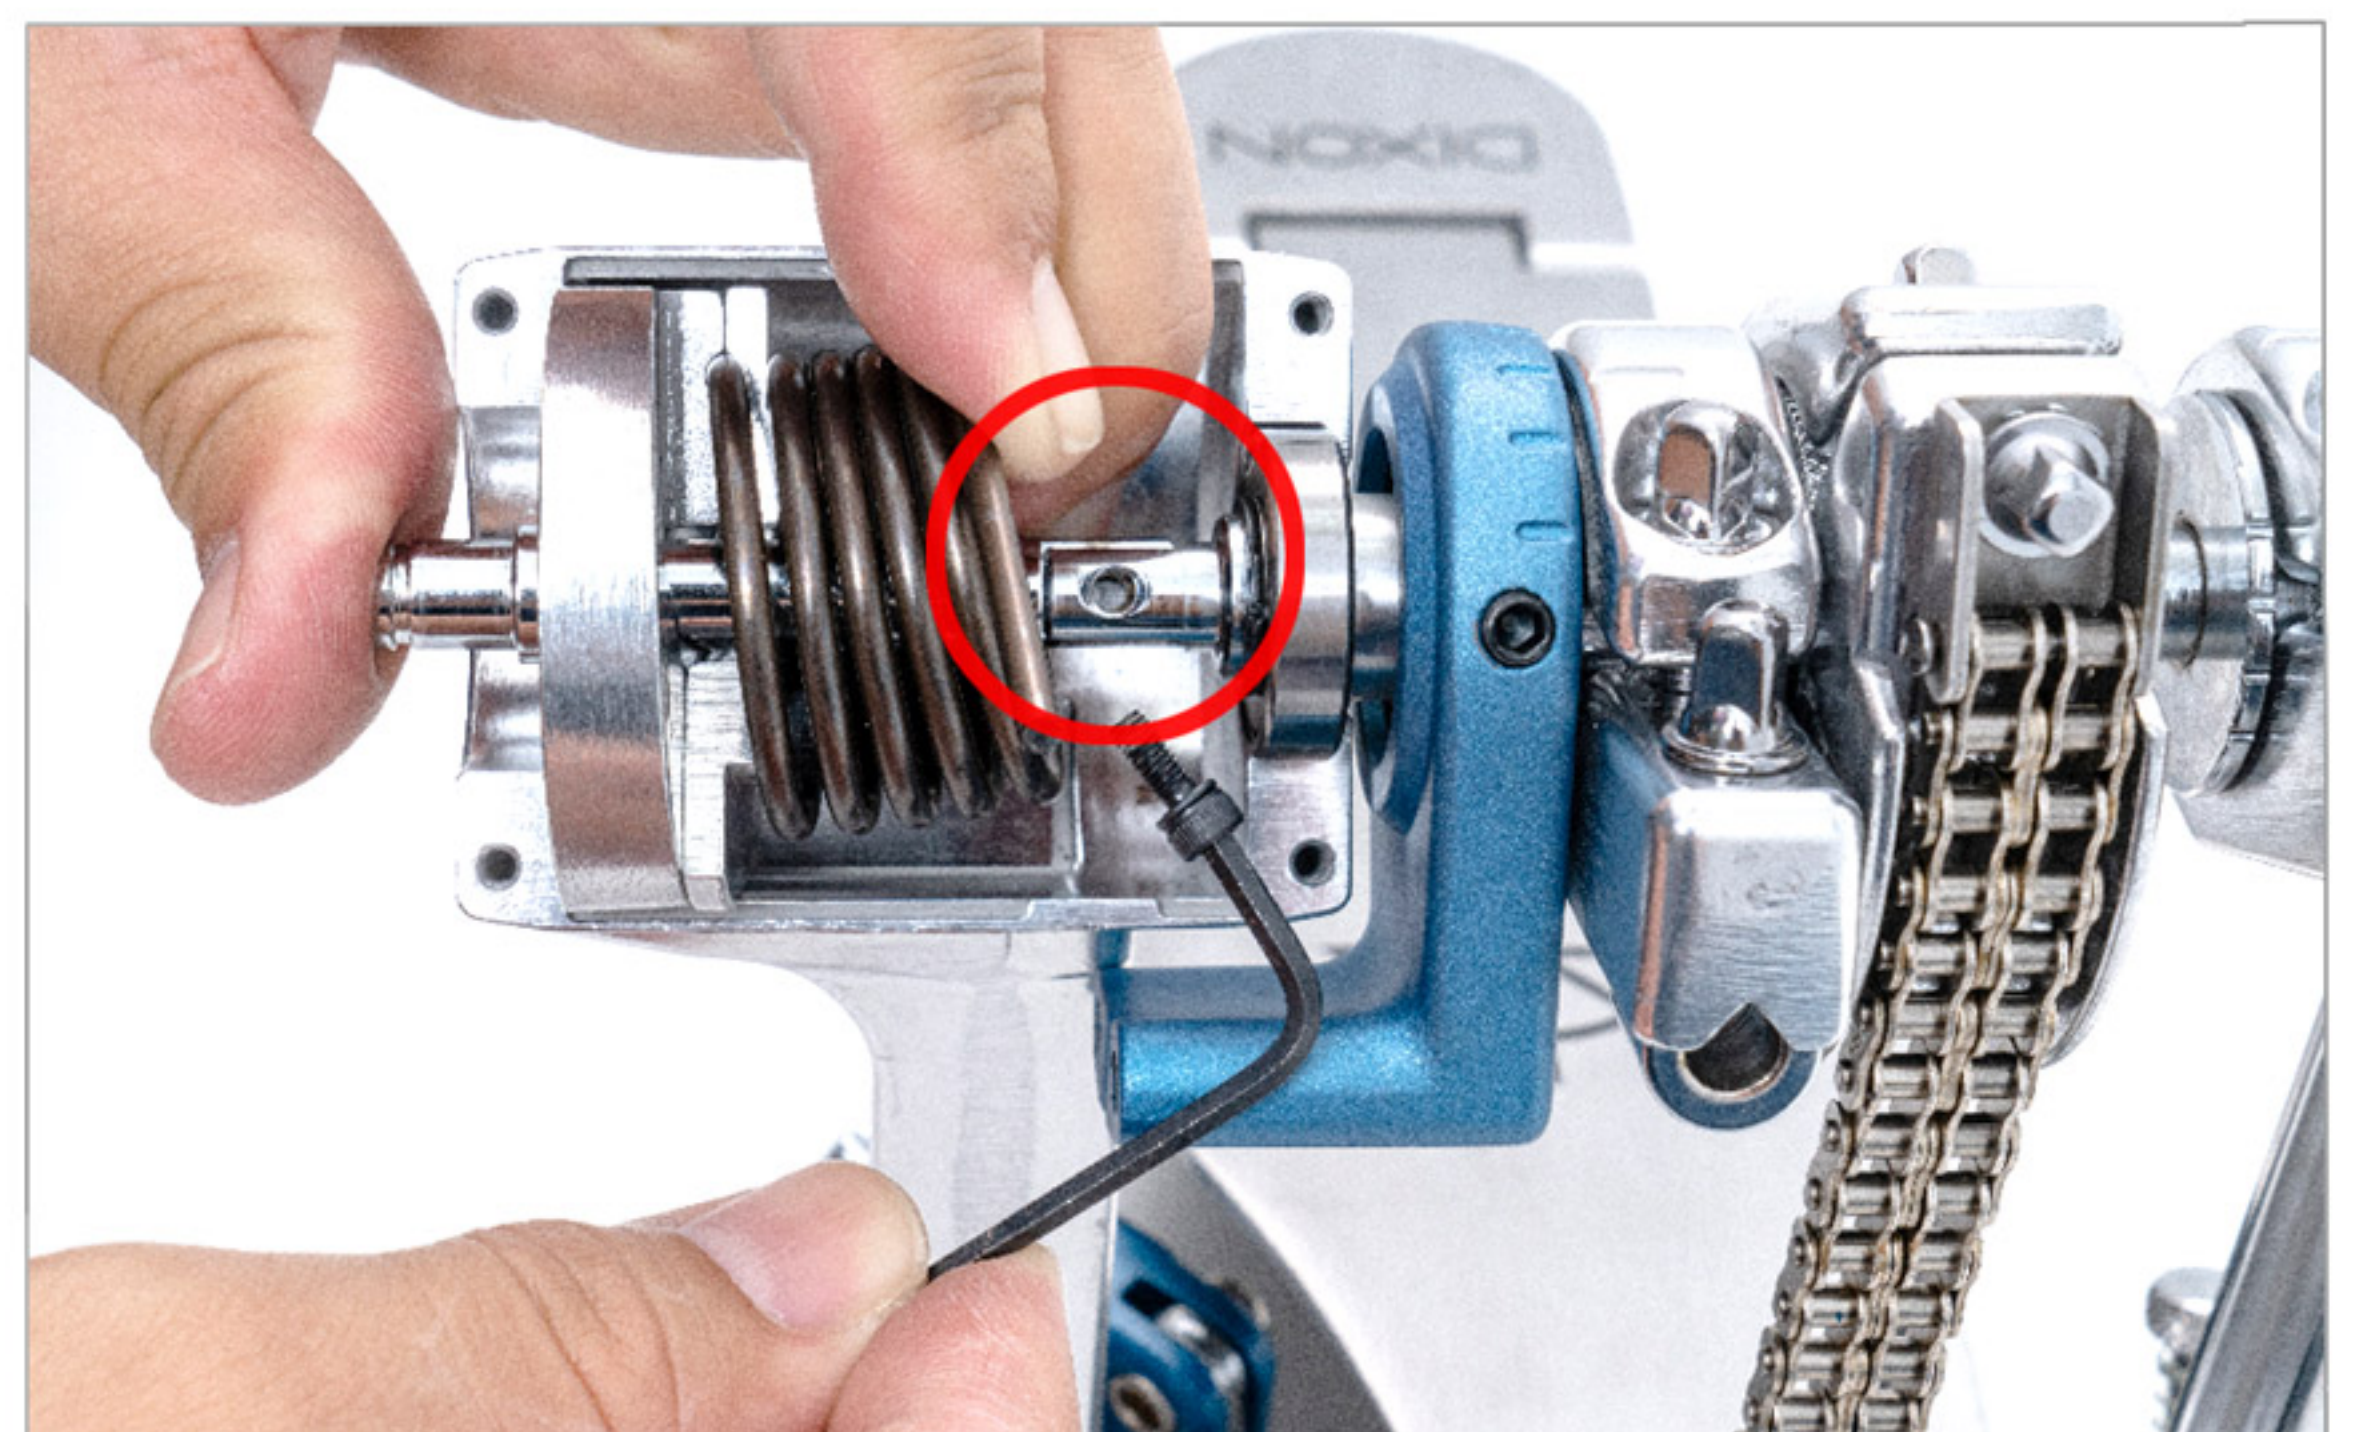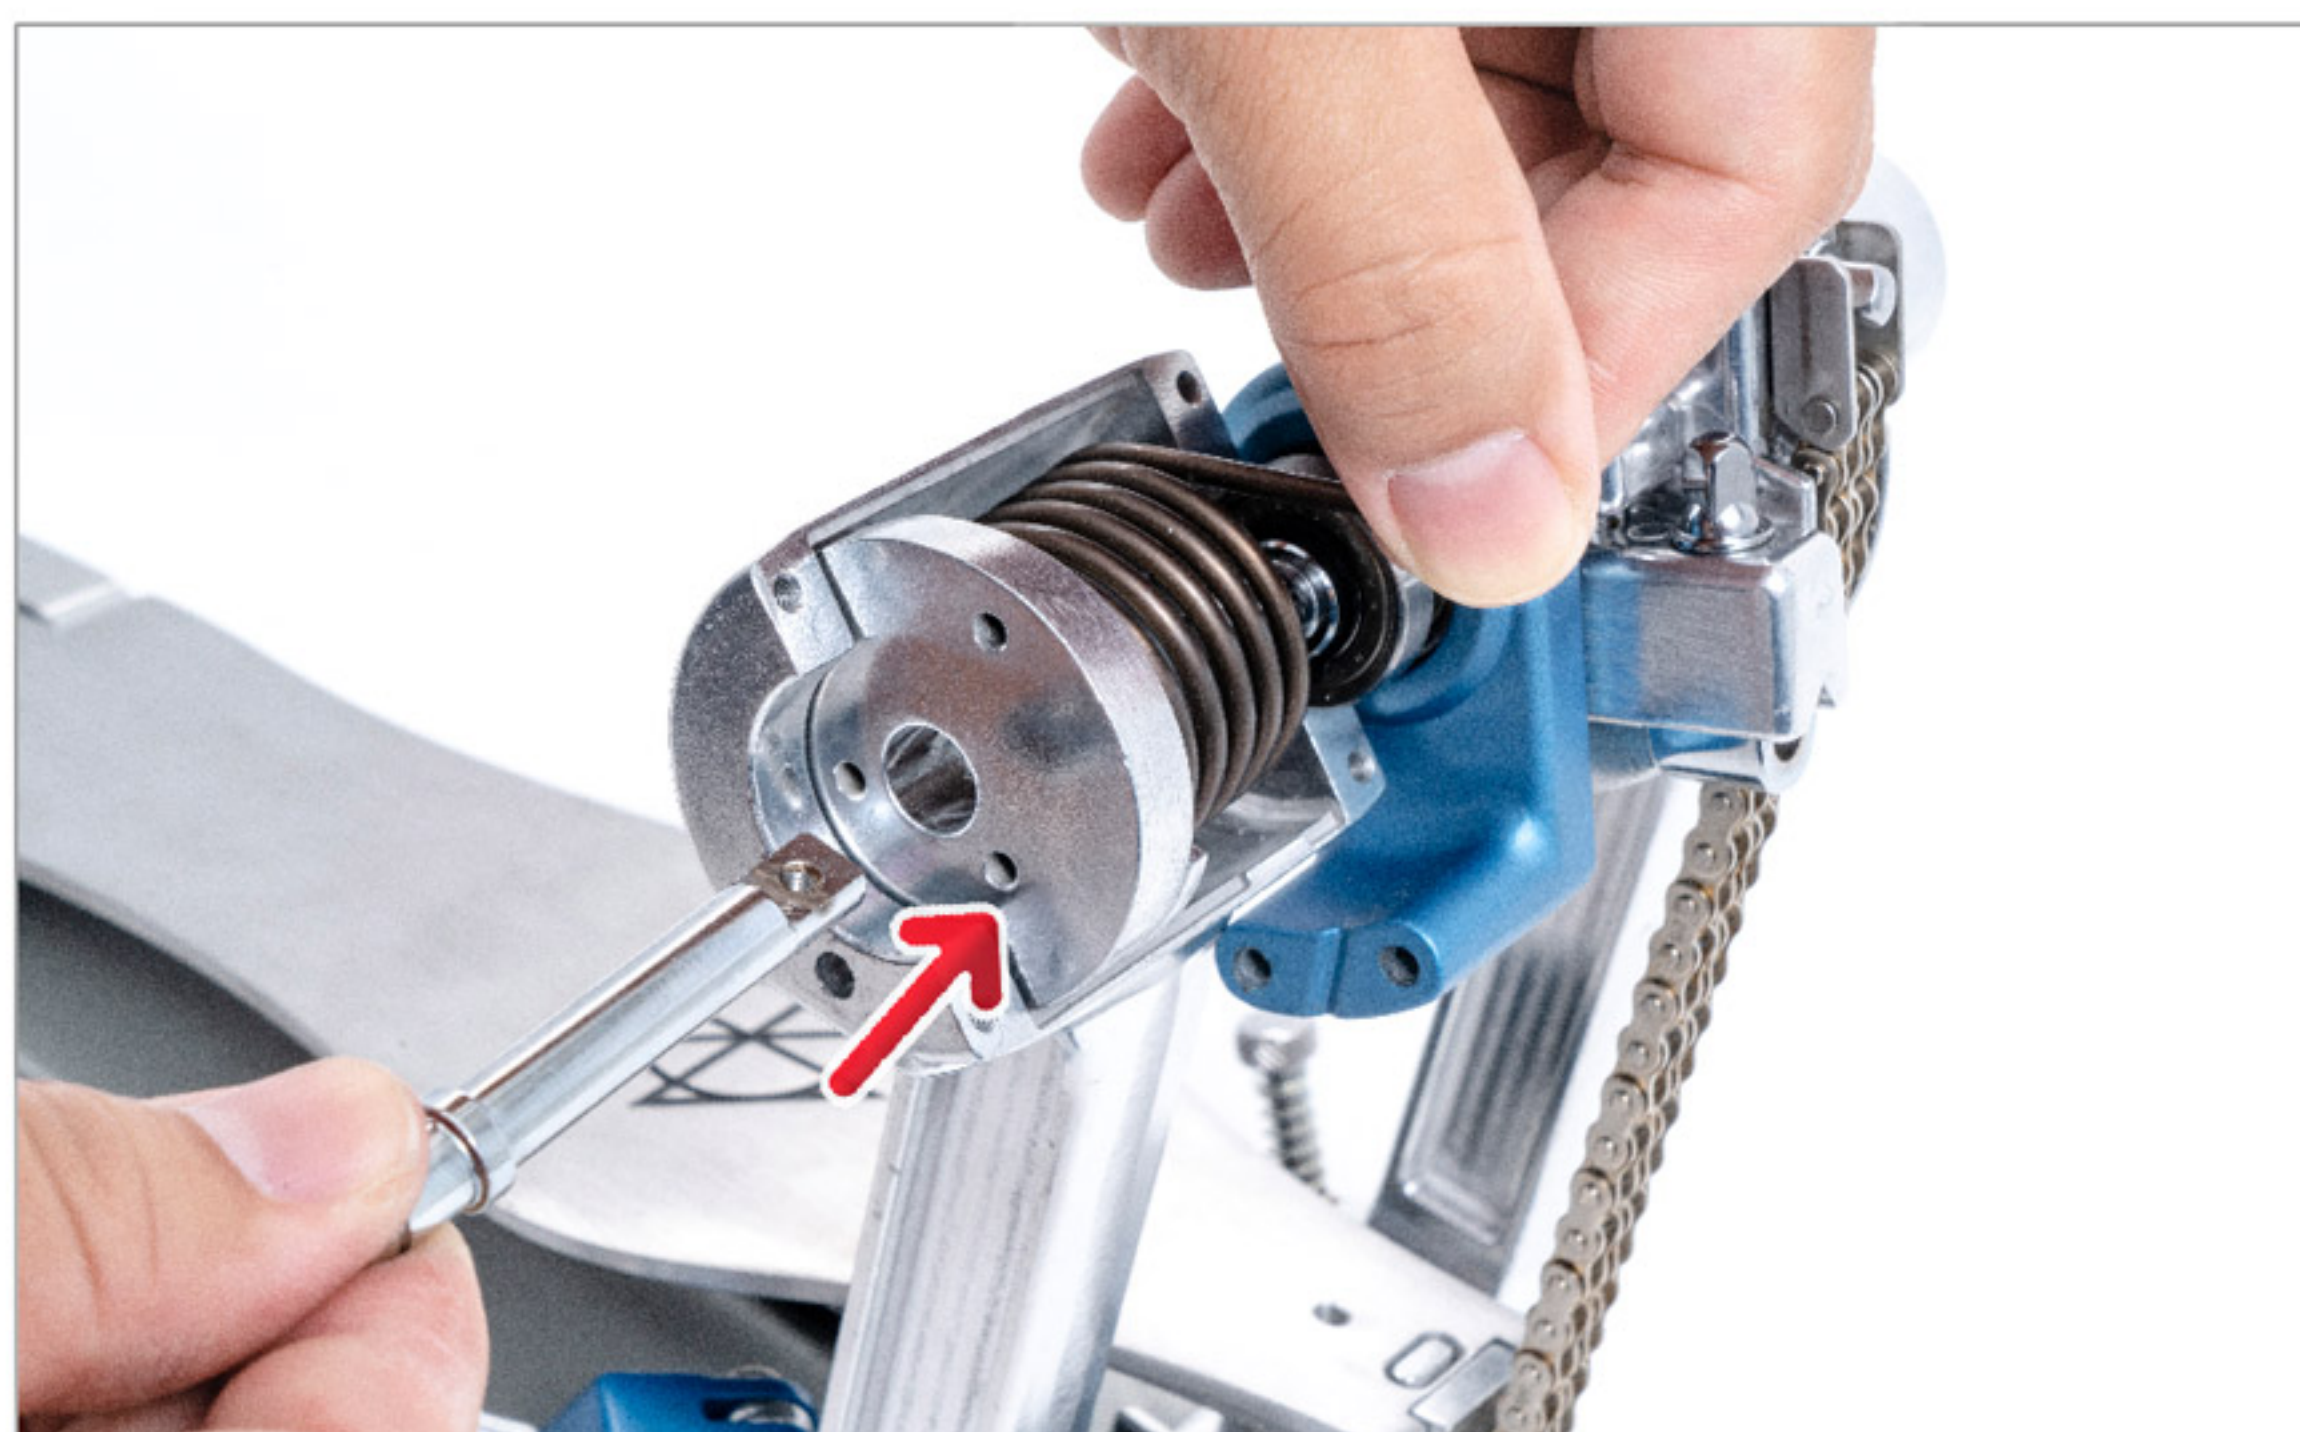





Install The Spring Cover


Put the side cover back and then insert the metal washer on the connecting post.

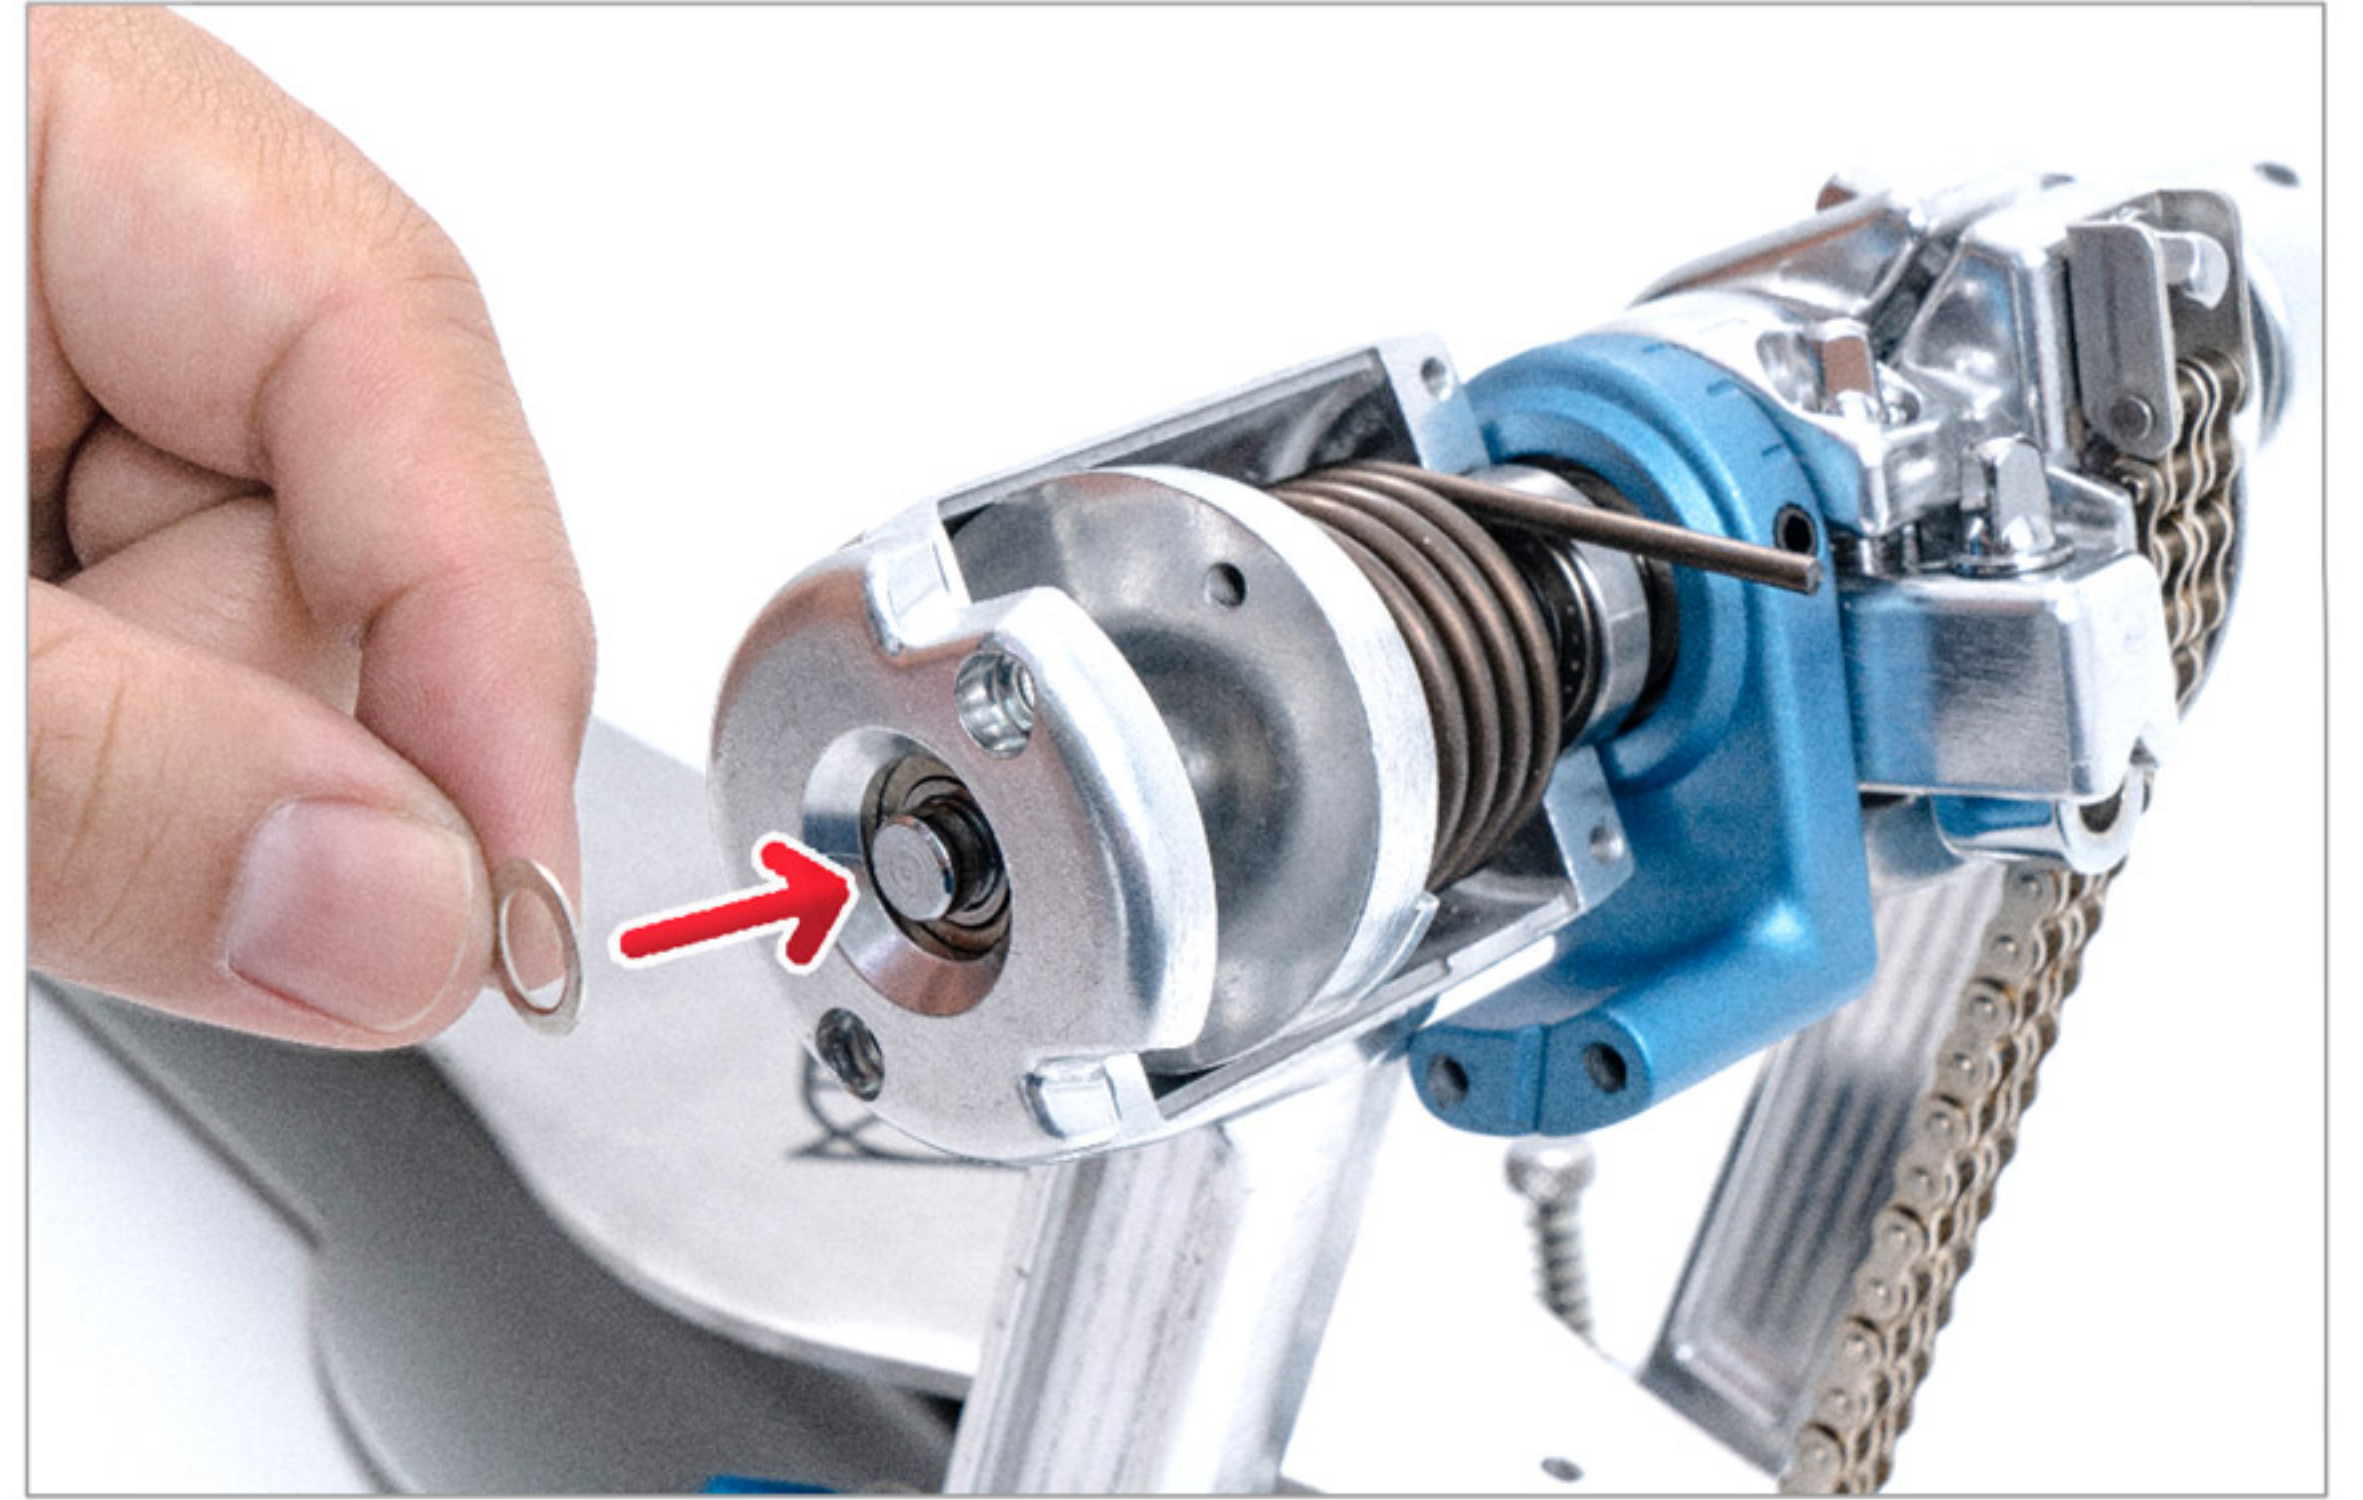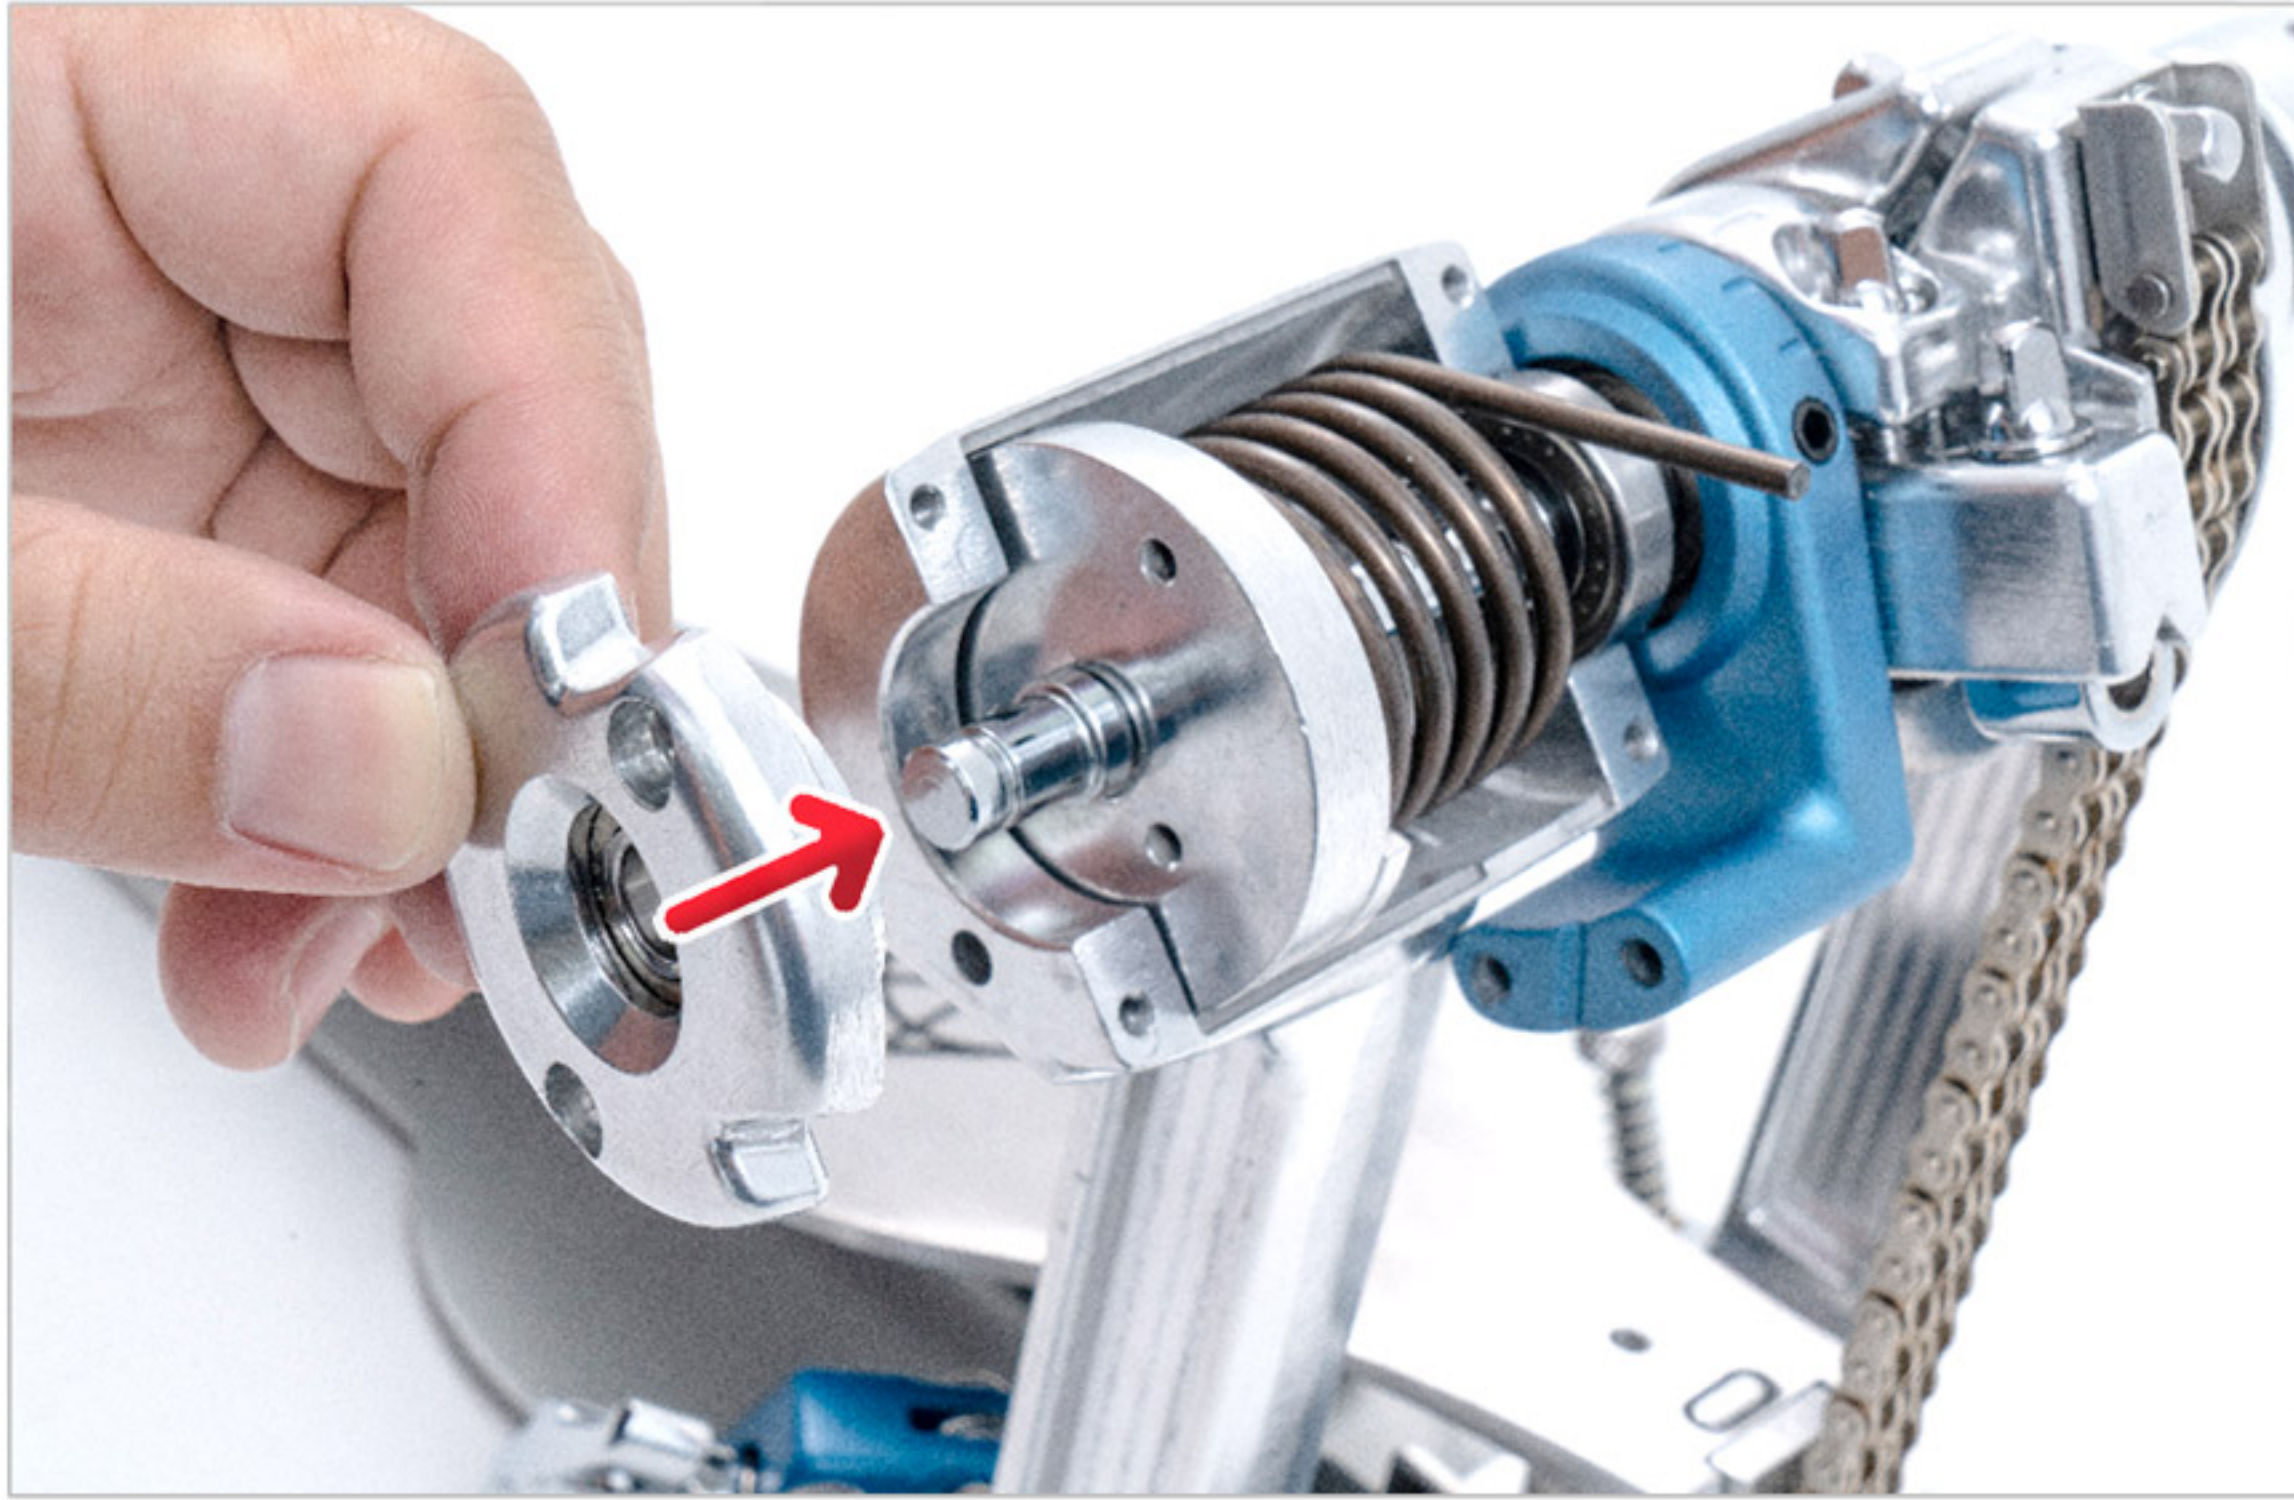

Put the C-clip back onto the connecting post with pliers. Make sure C-clip is placed in the "down-cut" (below marked in red dotted line) on the post.

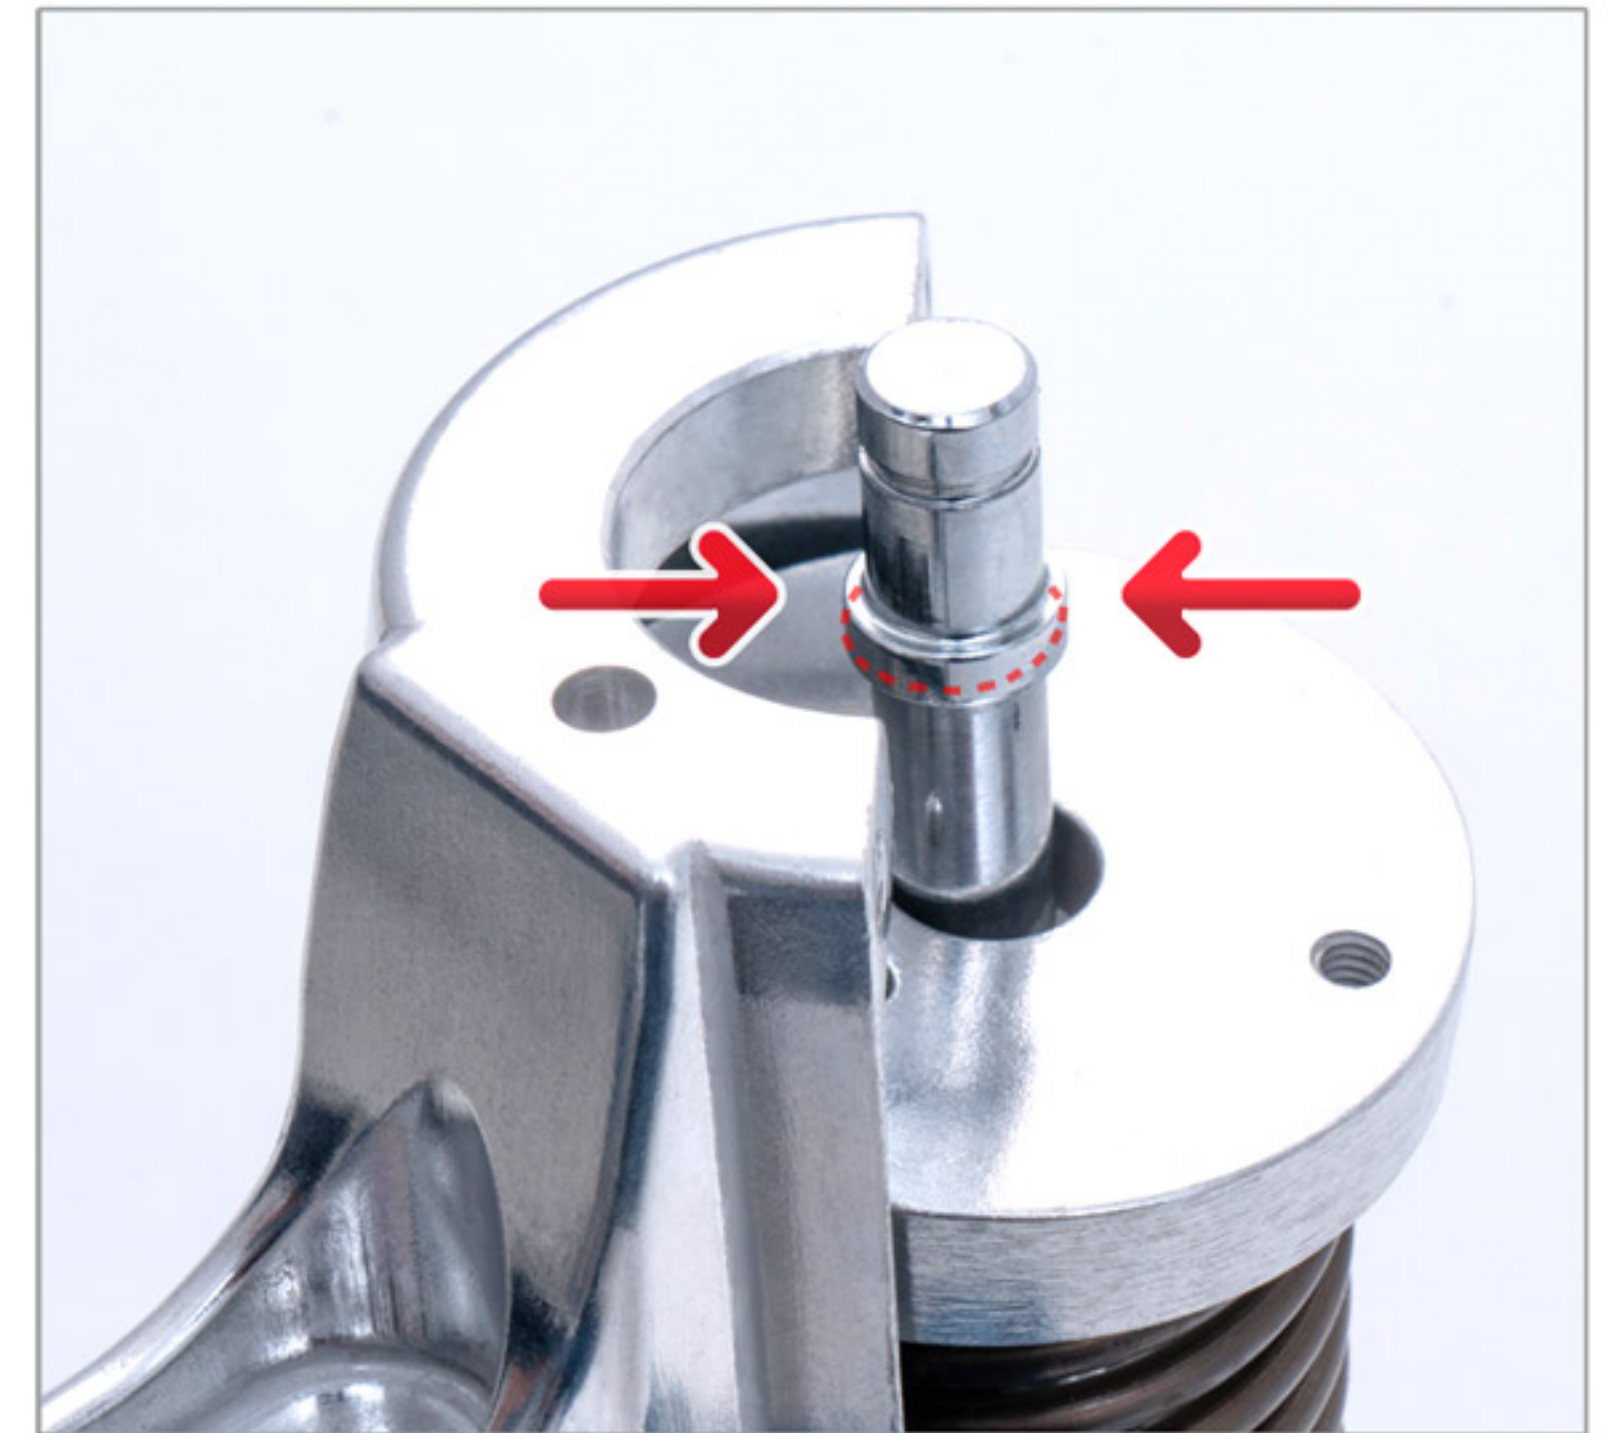
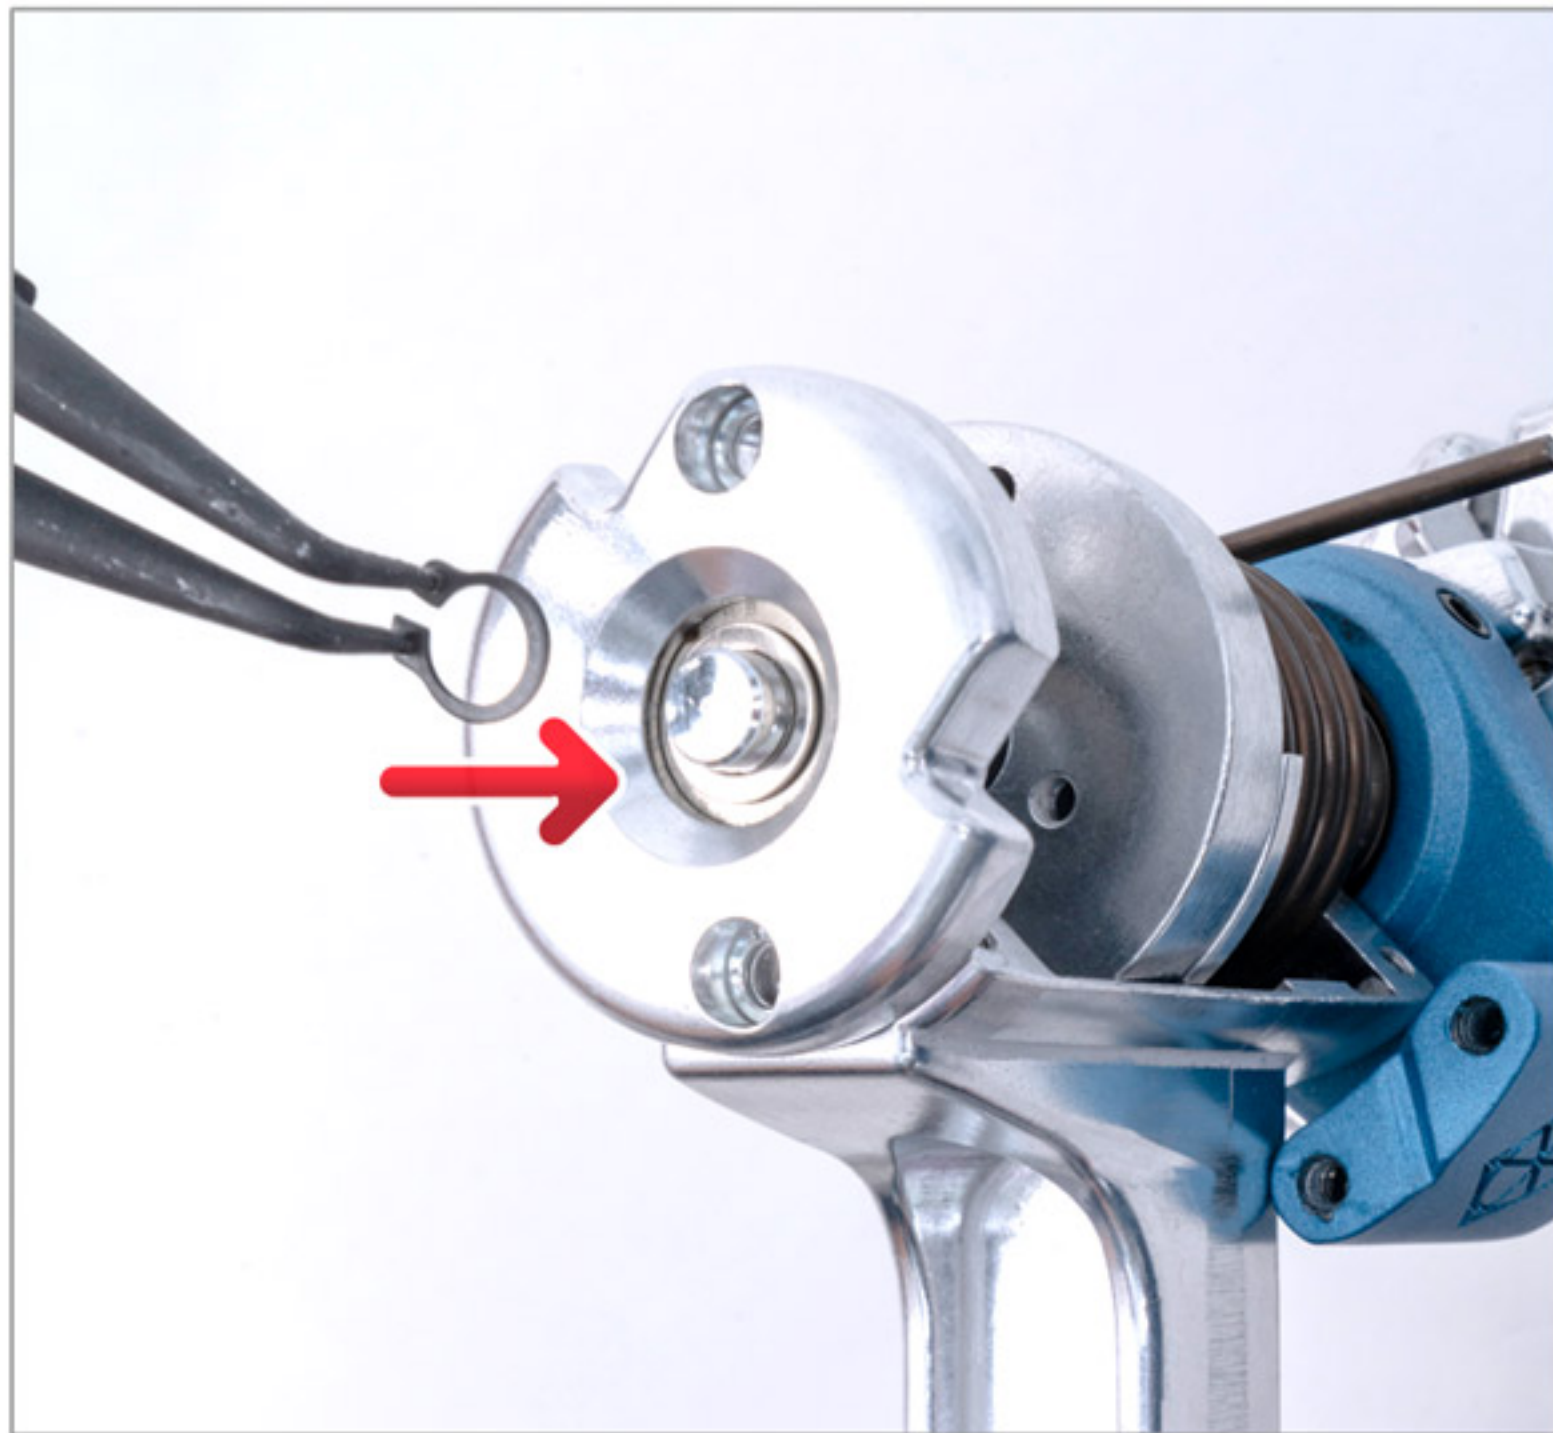


Tighten the C-clip arm with long nose pliers.


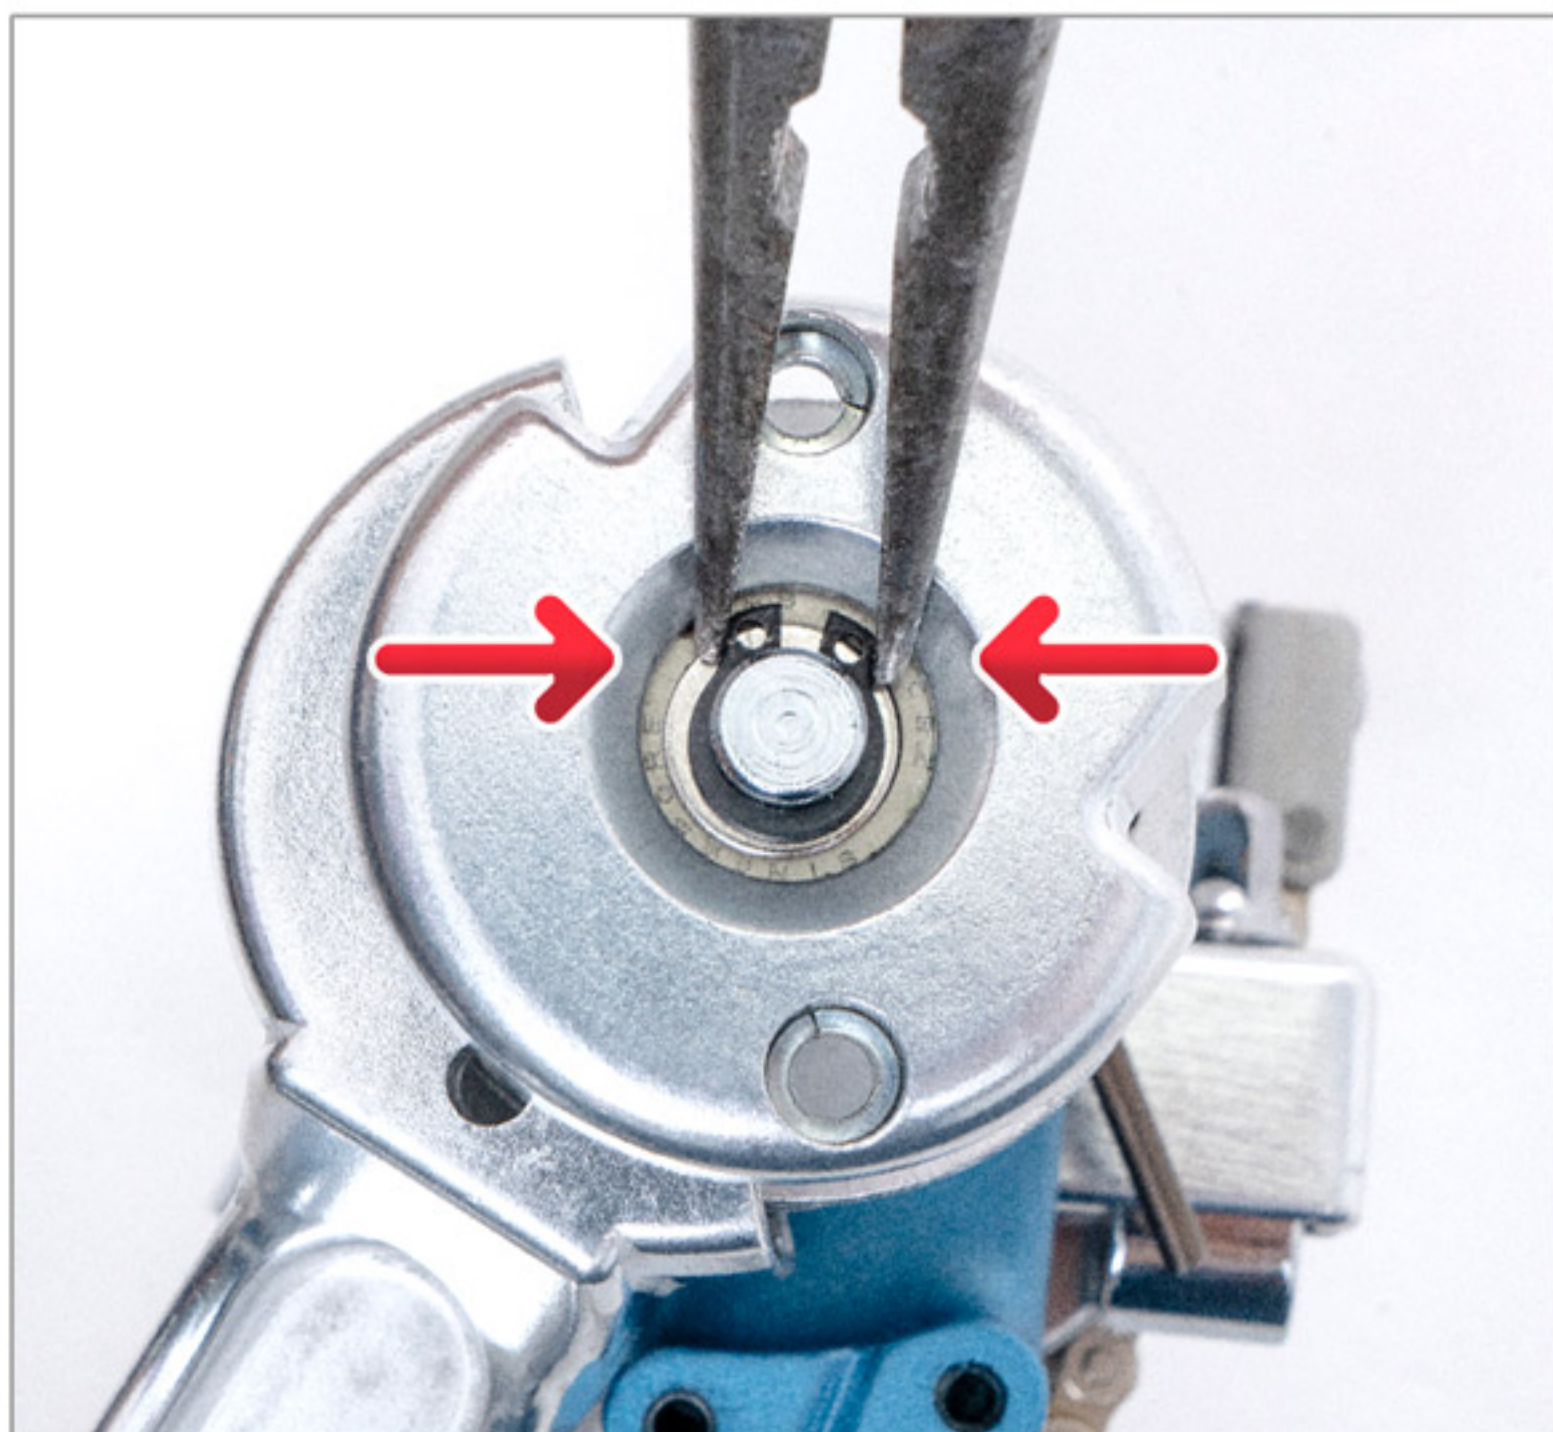




Put the top cover back and tighten the 4 screws with 2.5mm Hex L rod.

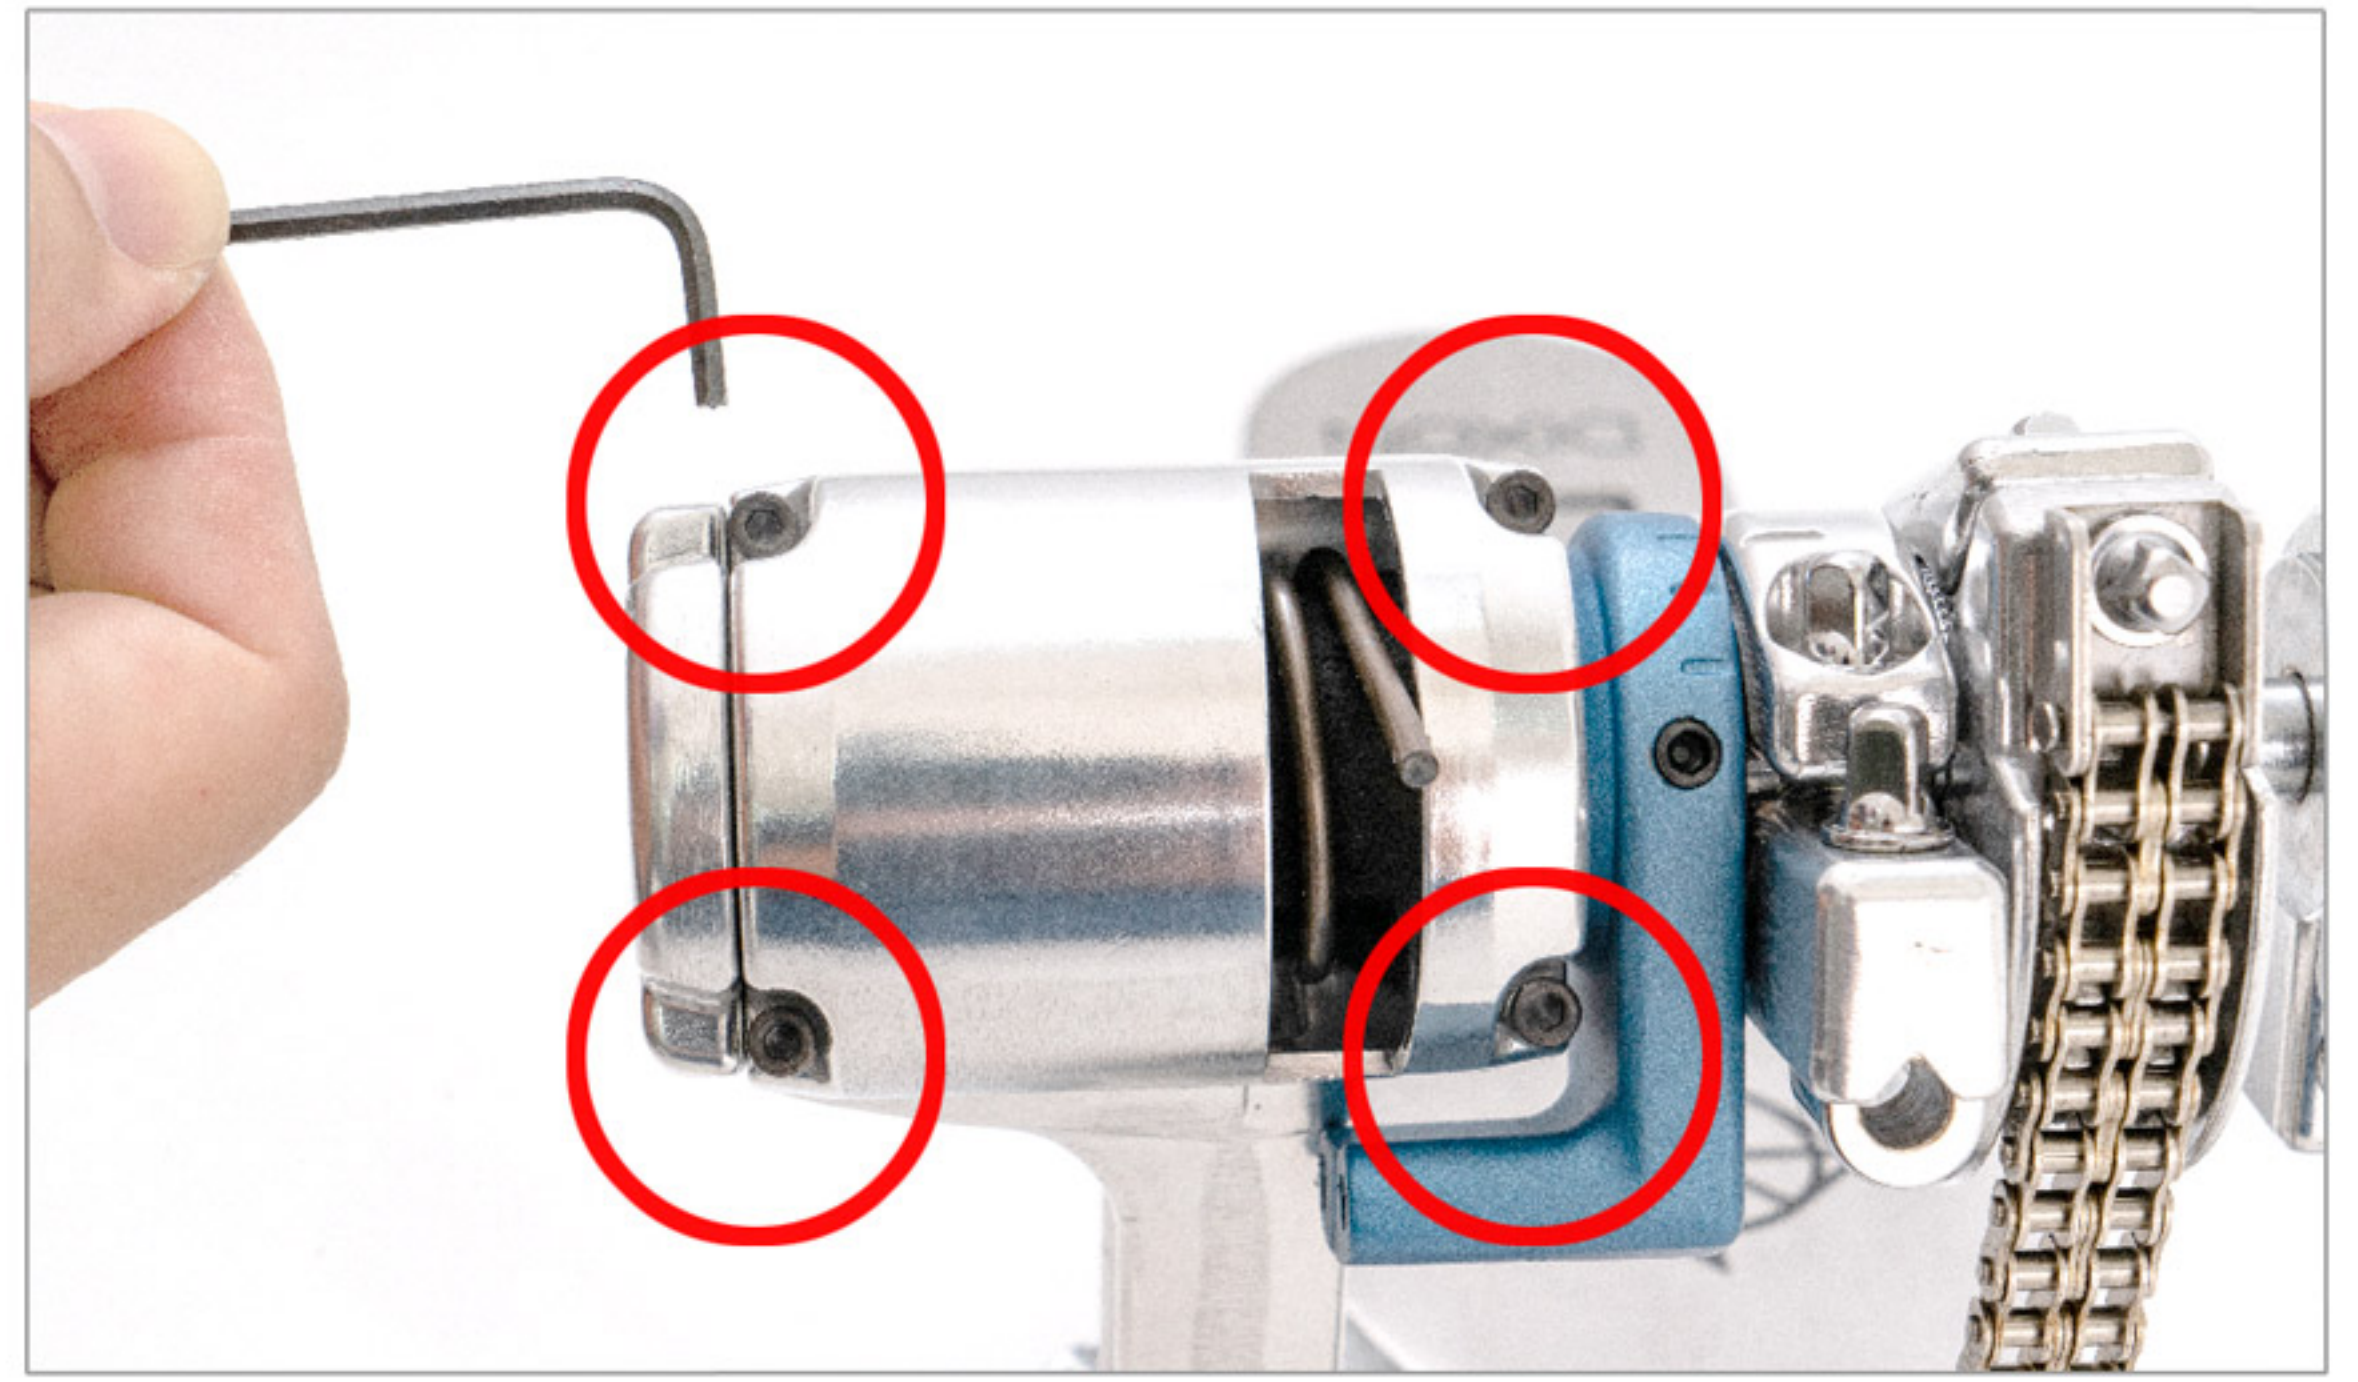
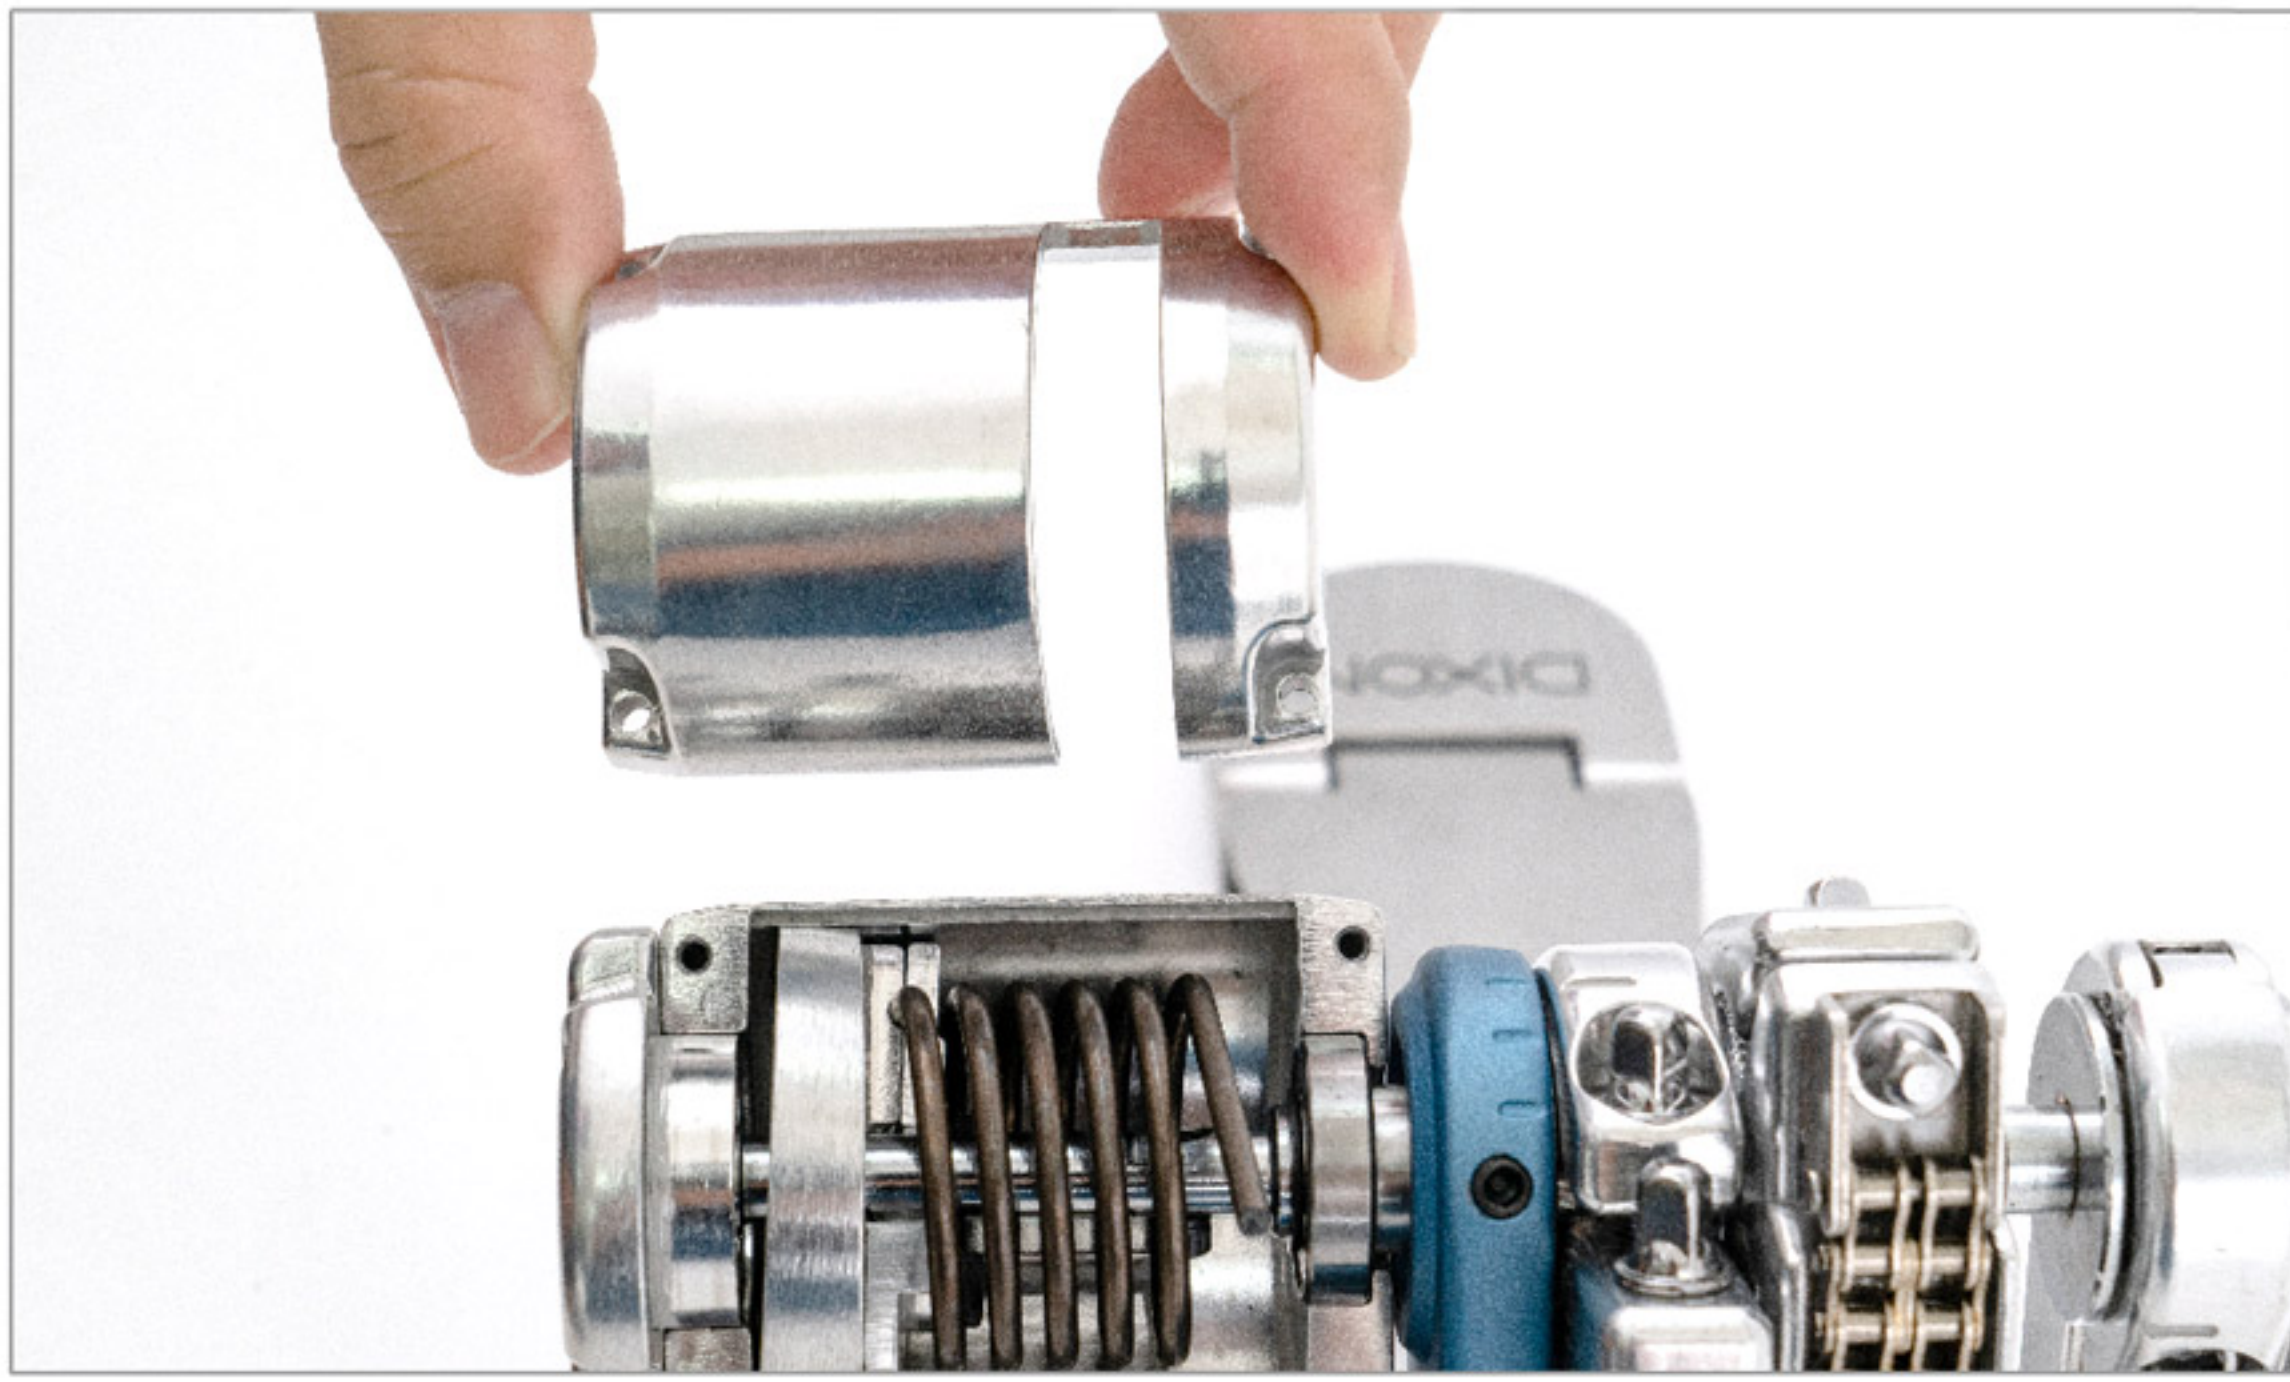


Tighten the 2 screws on the side cover with 3mm Hex L rod.

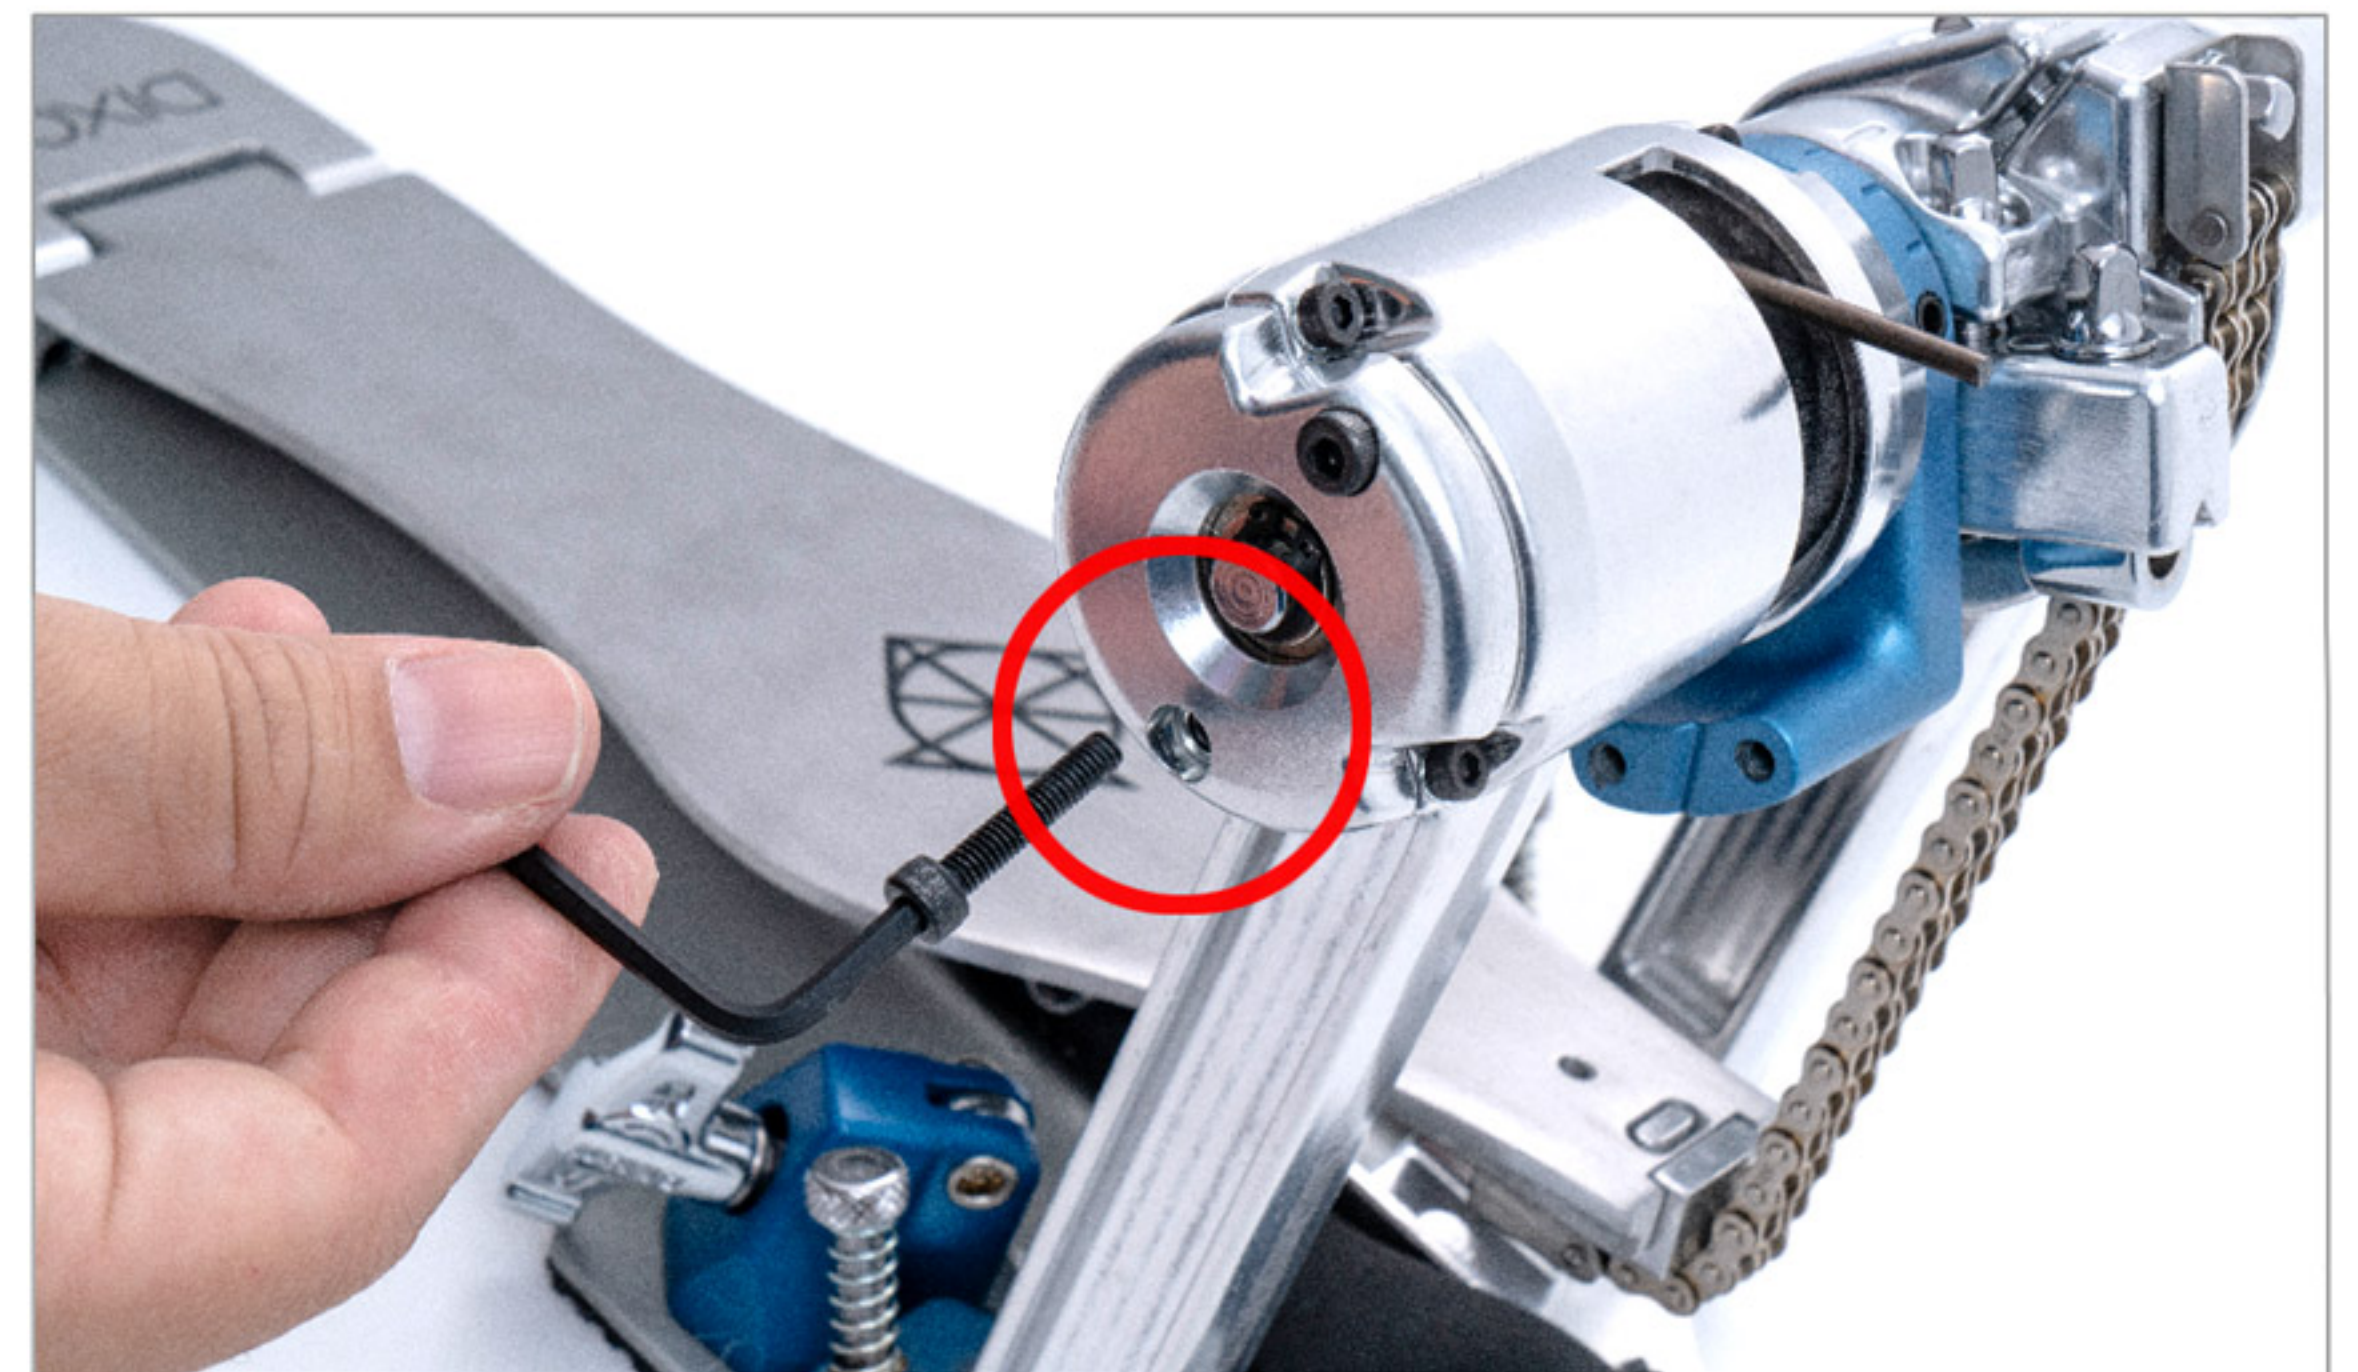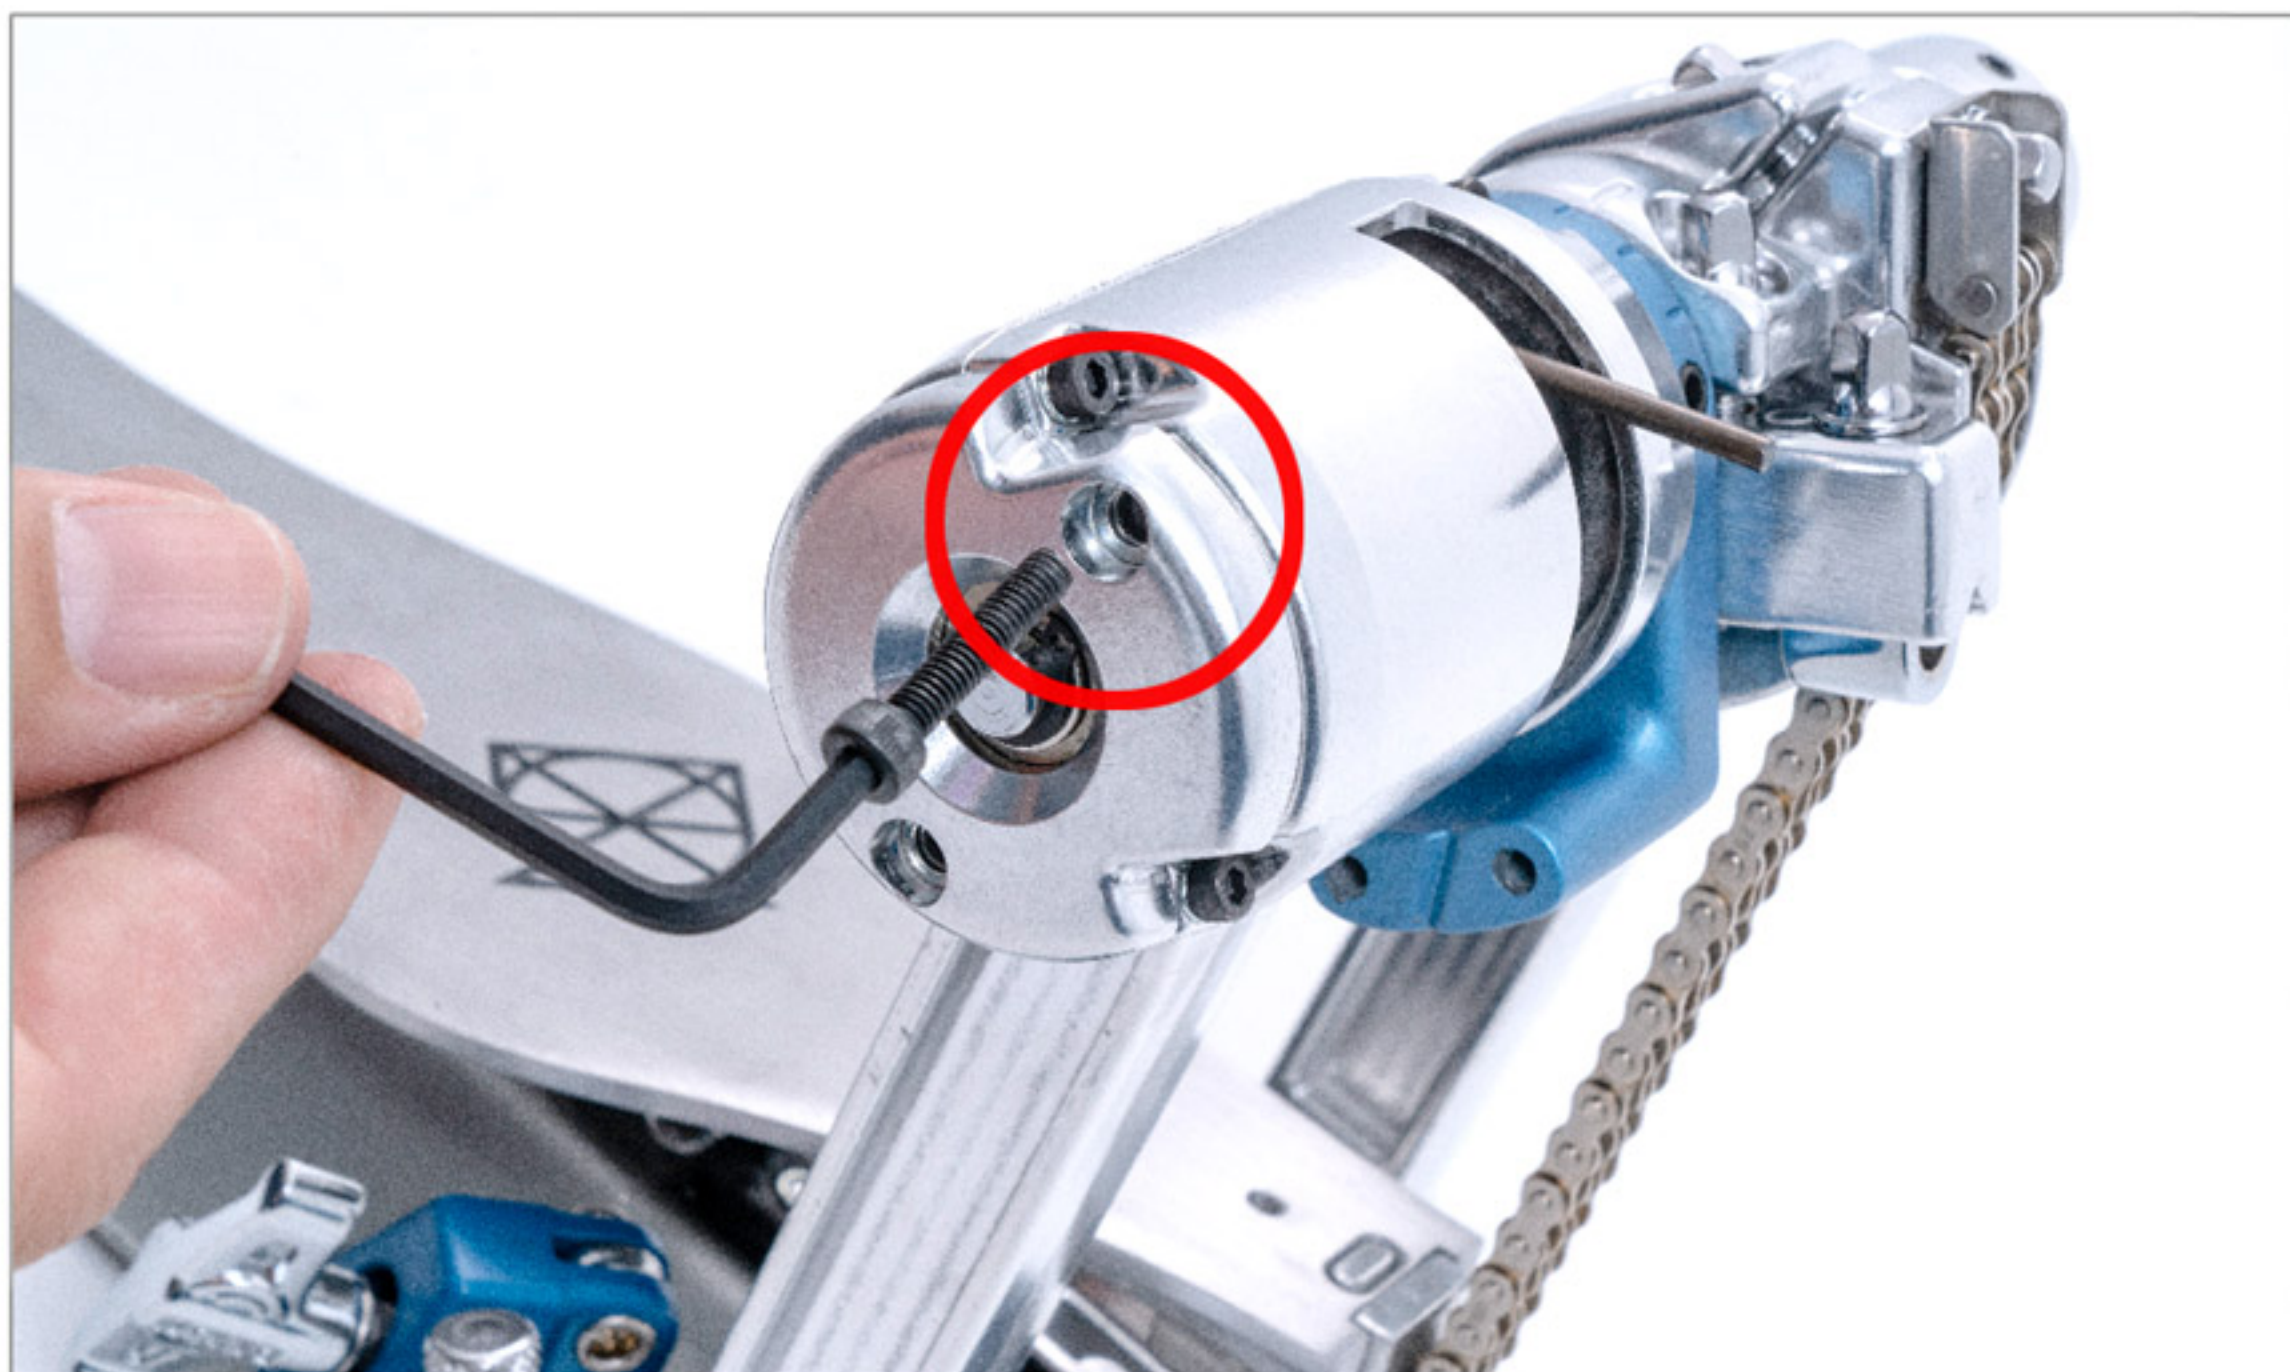



Install The Spring Holder

Put the spring arm back to the down-cut of blue spring holder.

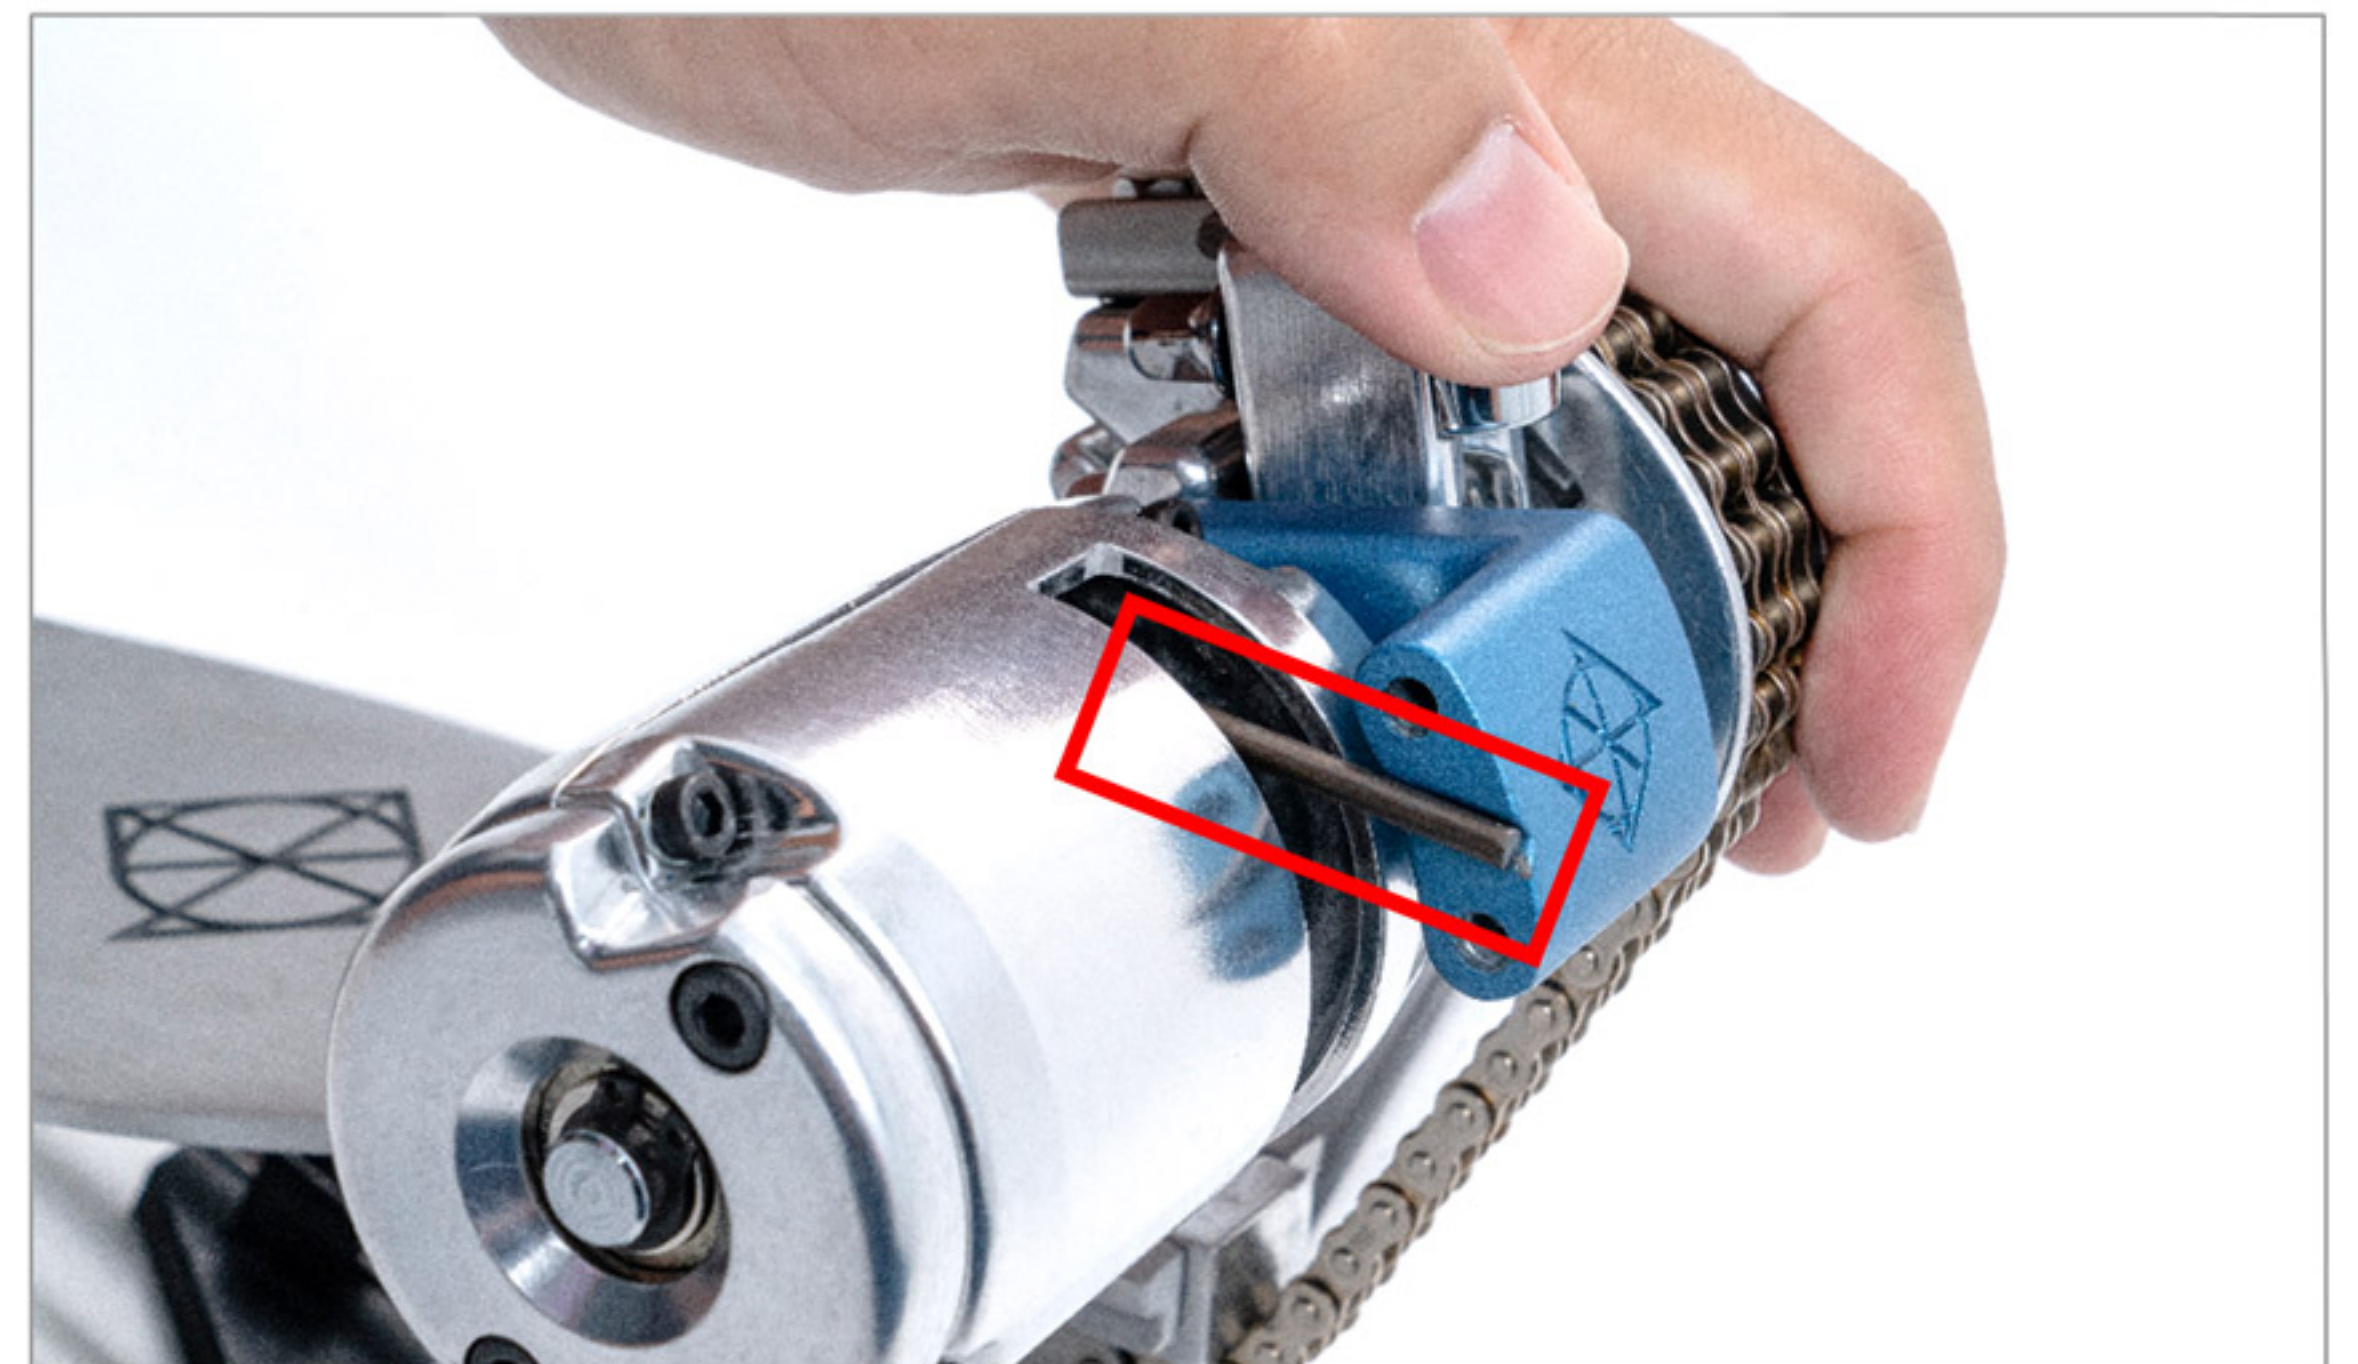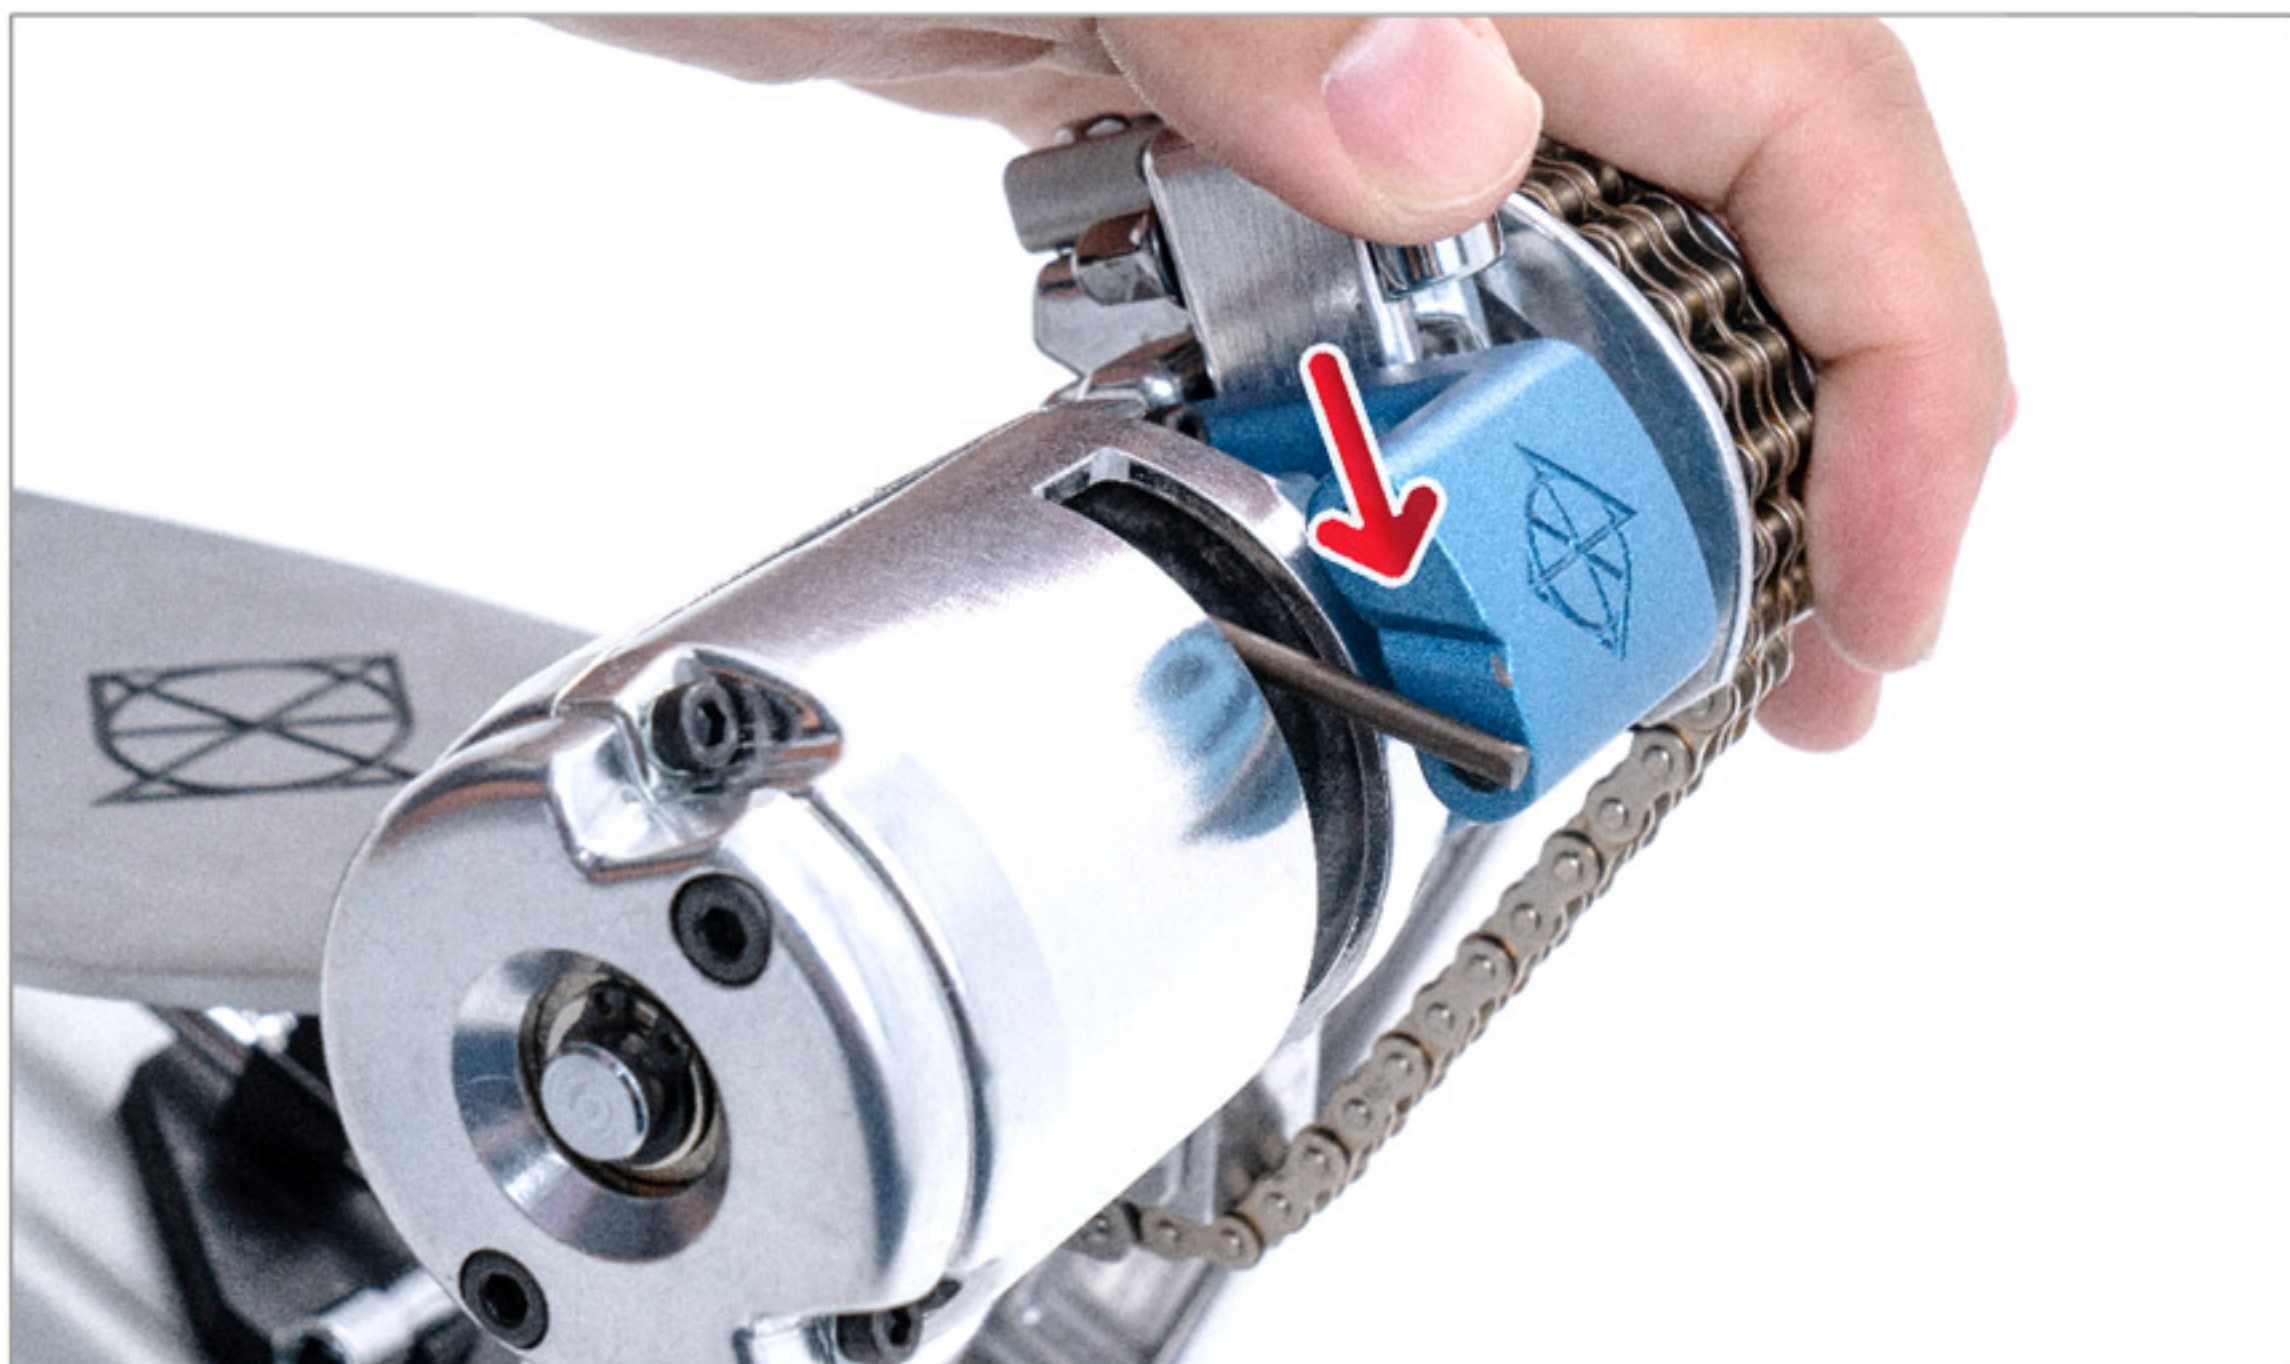



Tighten the 2 screws on the blue spring holder cap with 3mm Hex L rod.

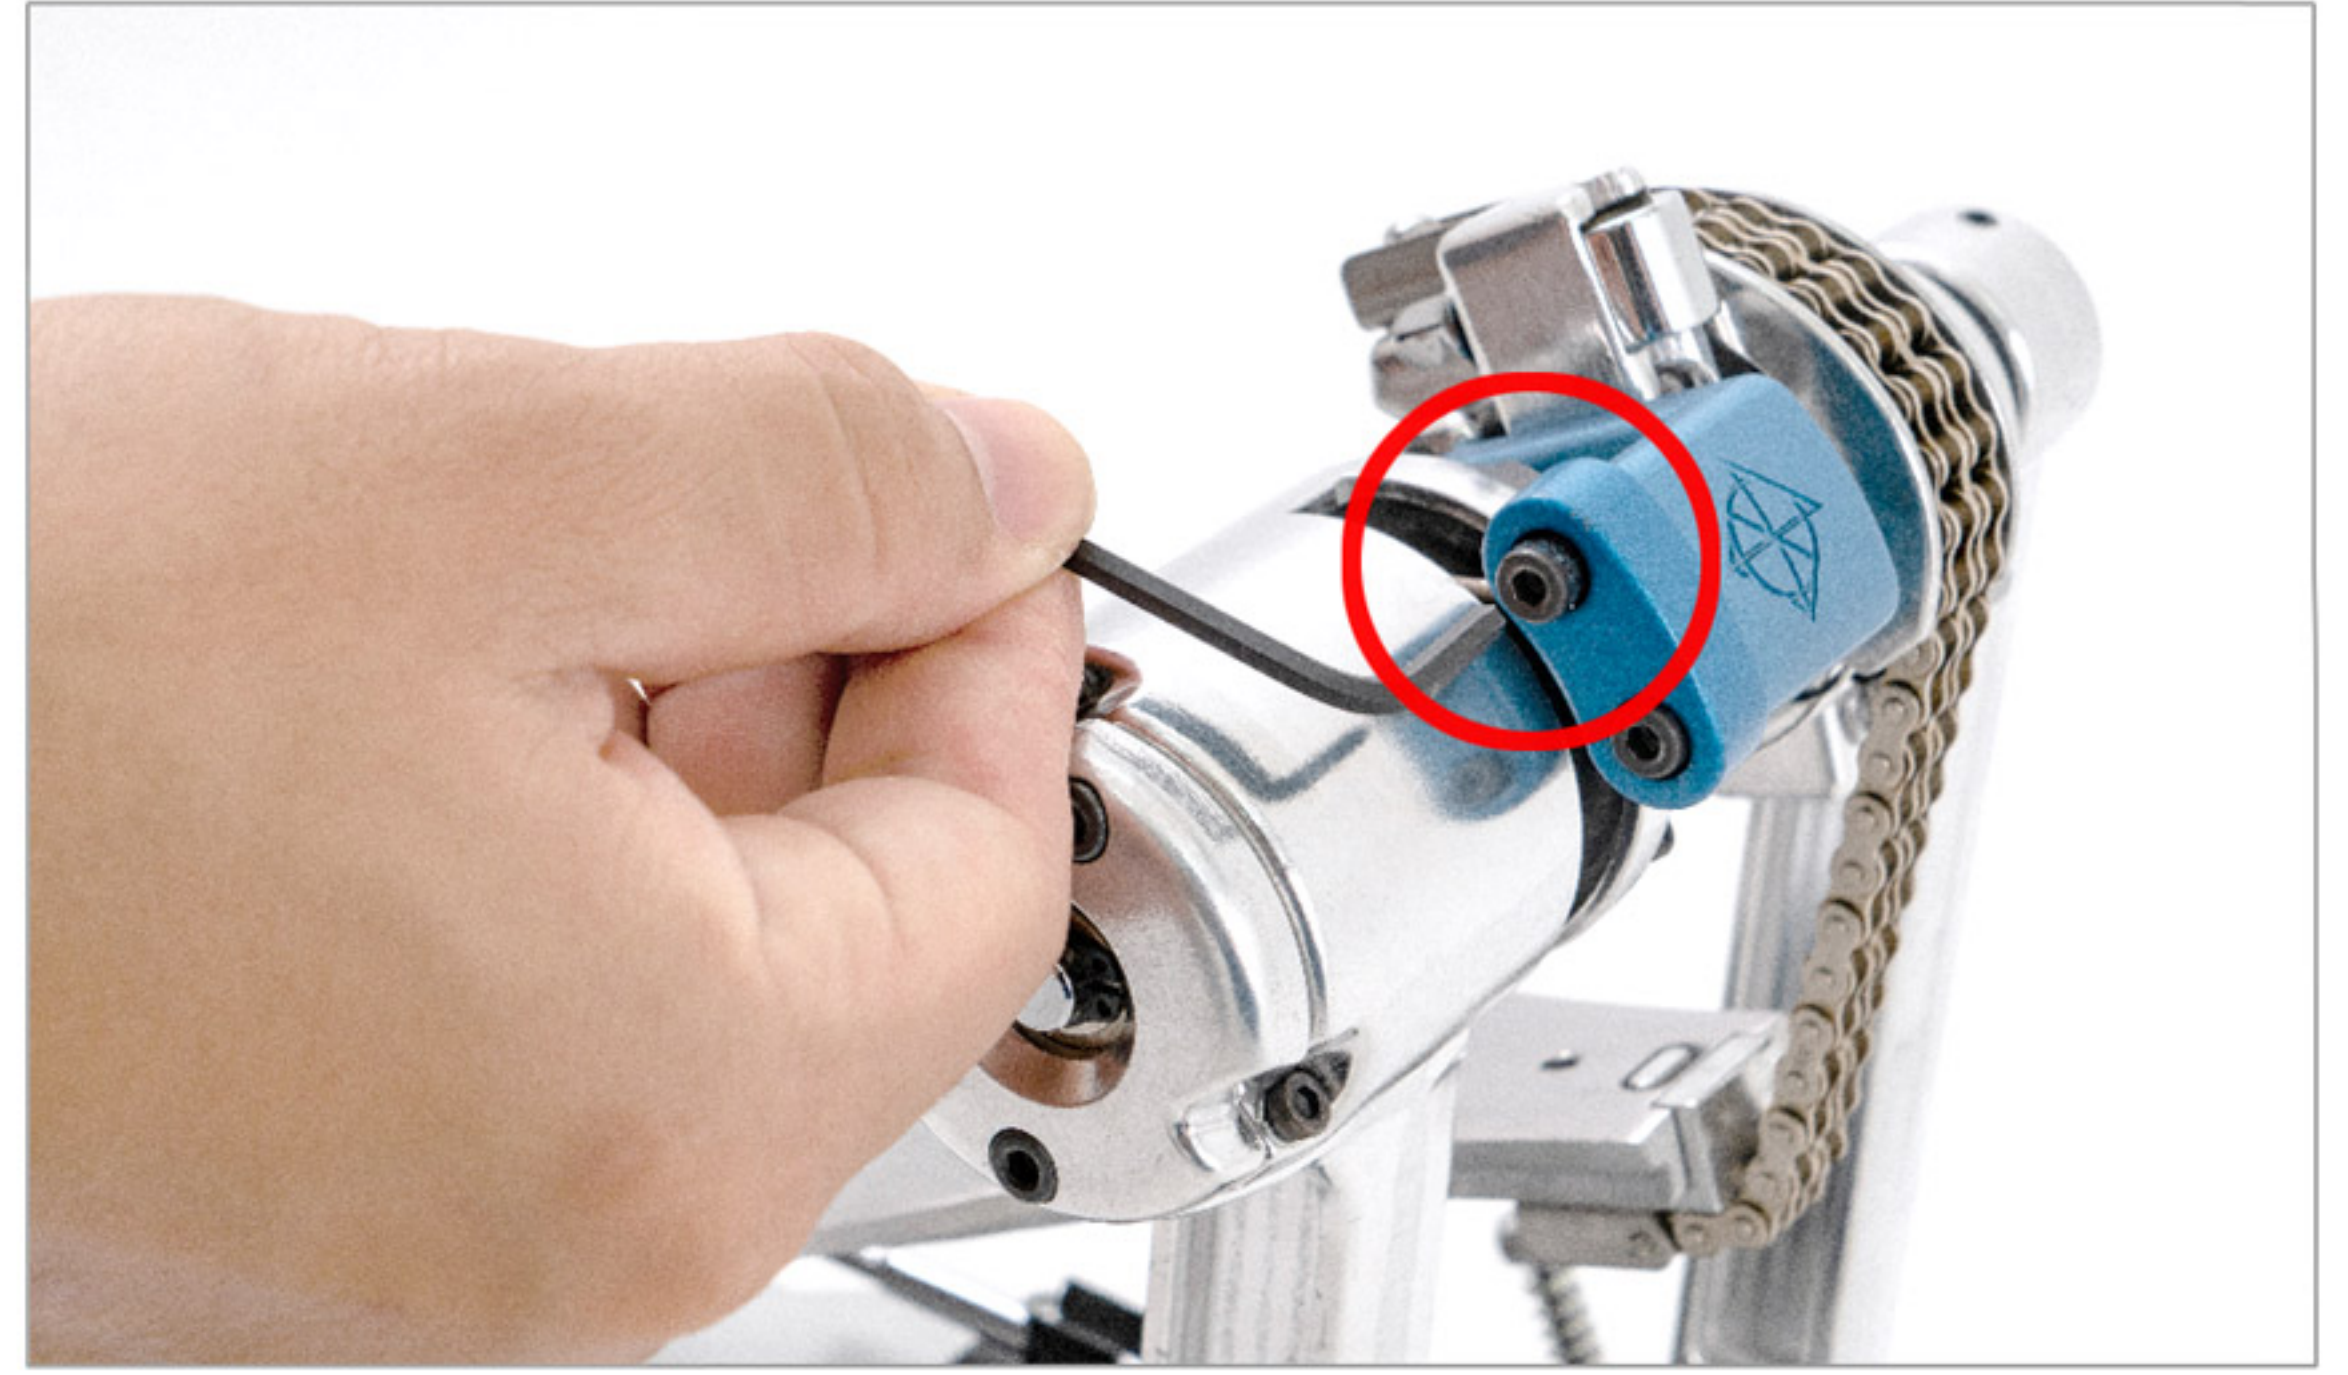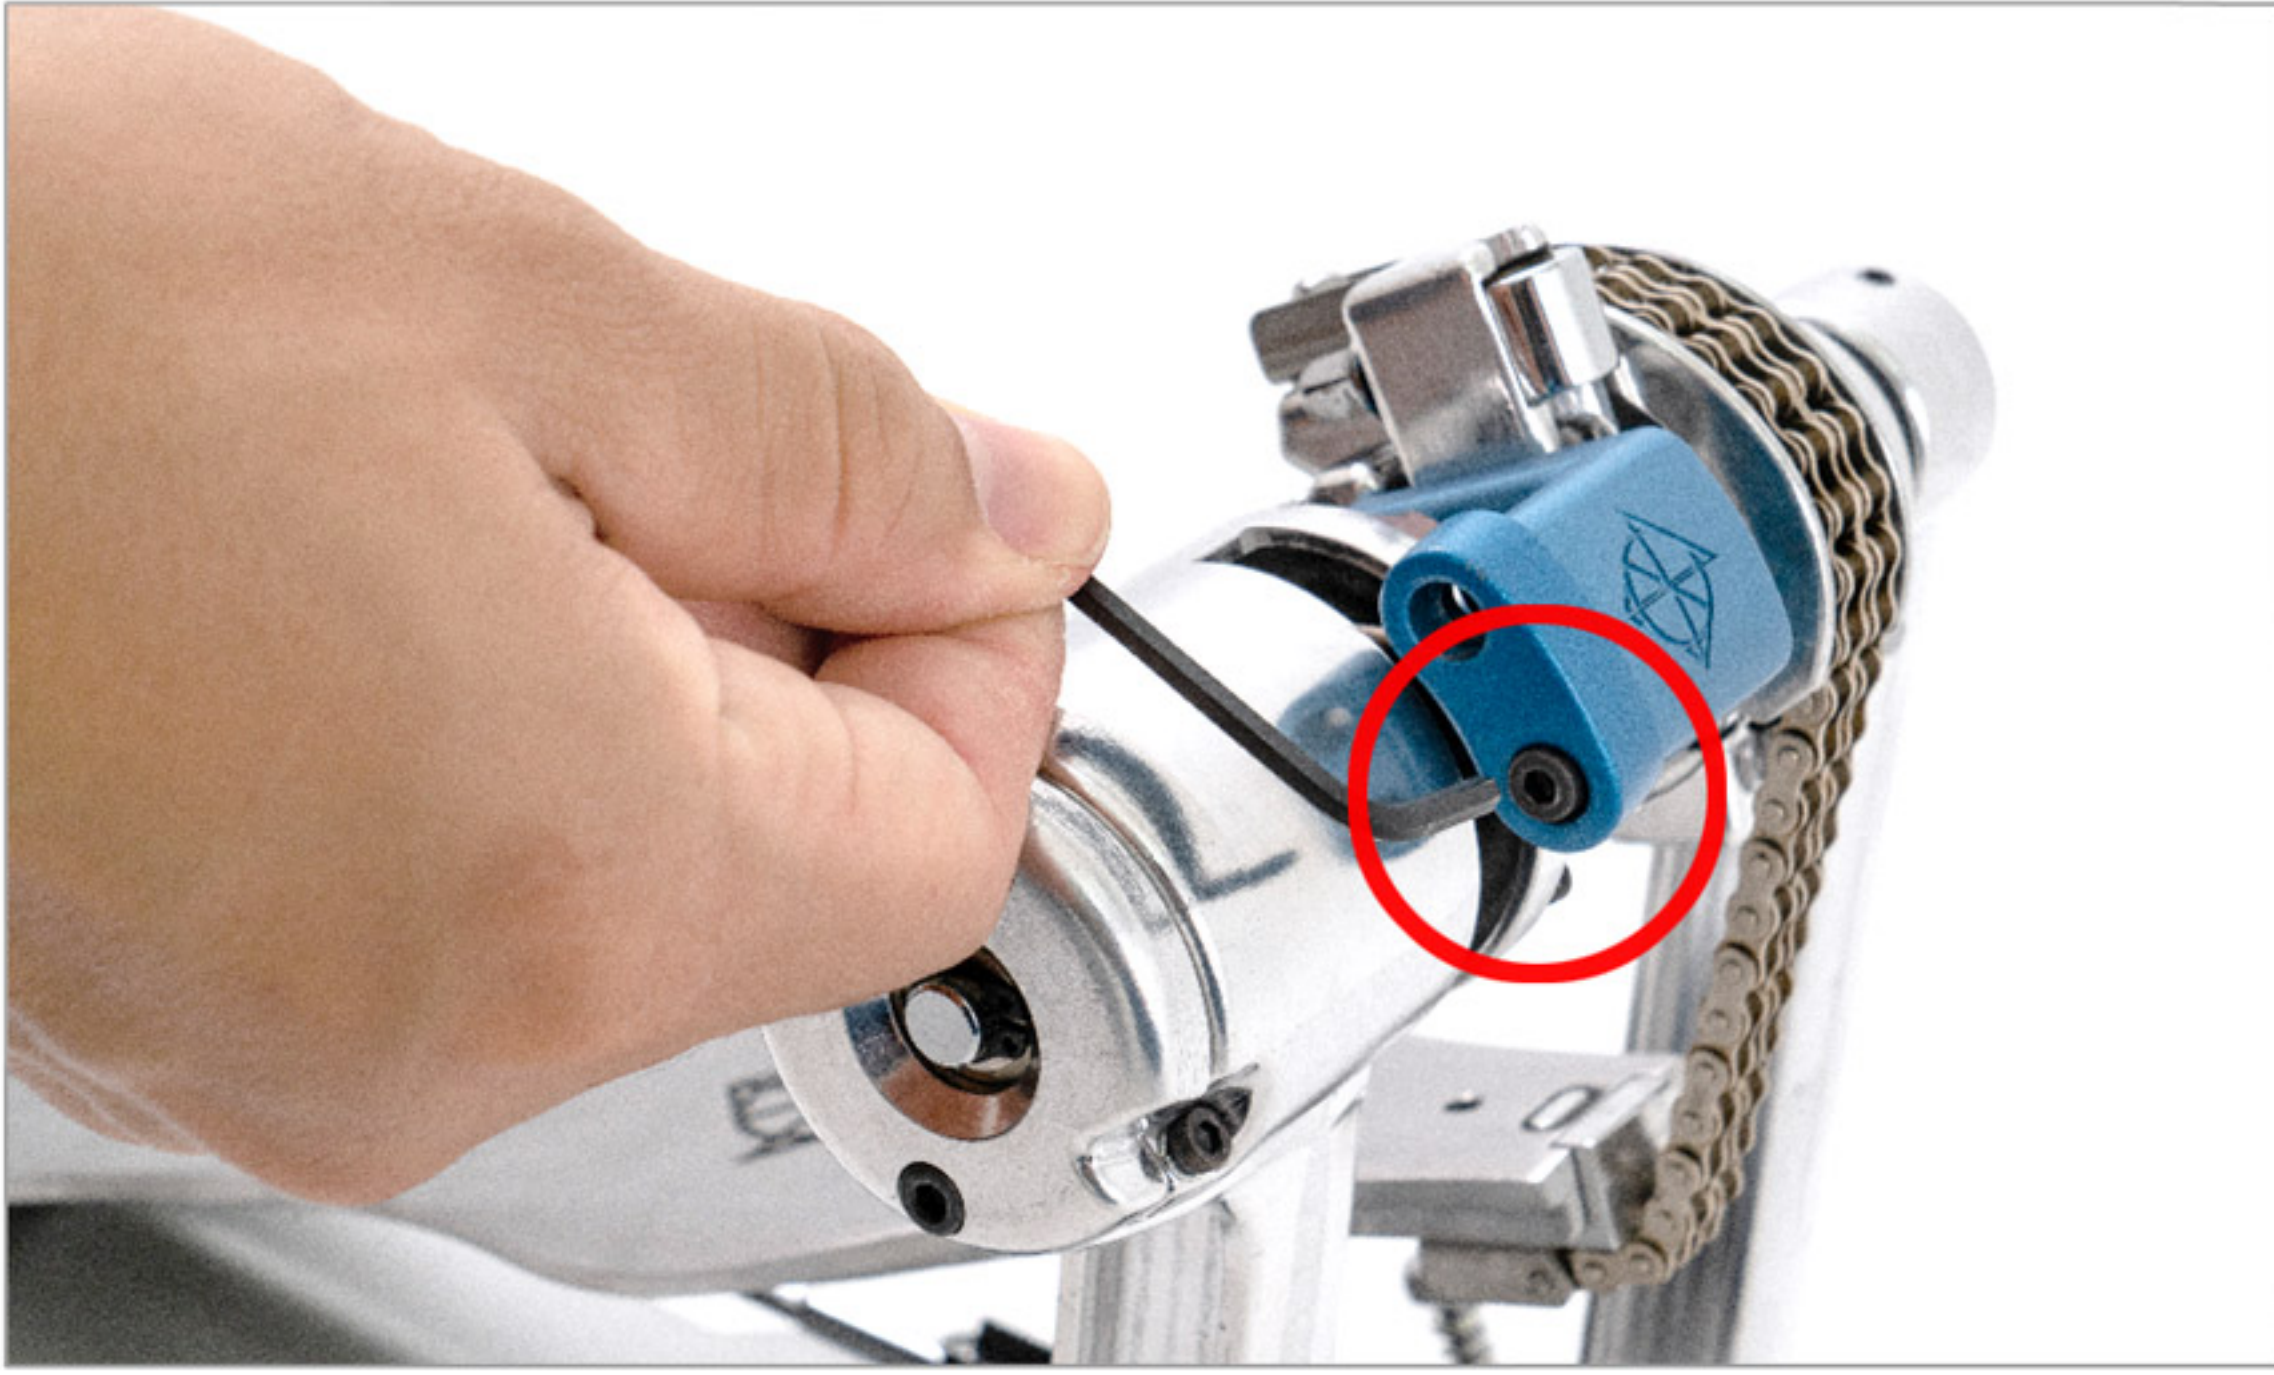

Make sure the cap is equally tightened on both ends.

